

Electronically Commutated (EC) Fan

Centrifugal Fan

800 x 800 x 482 mm



Delta Electronics (Dongguan) Co., Ltd. certifies that the GTM063NUU41R-V001 shown herein is license to bear the AMCA Seal. The ratings shown are based on tests and procedures performed in accordance with AMCA Publication 211 and AMCA Publication 311 and comply with the requirements of the AMCA Certified Ratings Program.




Technical features

Input Side	
Nominal Voltage	3~ 400Vac 50/60Hz
Input Source	3~ 380Vac - 480Vac
Power @ Free air	1760 W
Power @ Max. load	3844 W
Output Side	
Speed (RPM)	1650
Qmax. (CMH / CFM)	18302 / 10766
Pmax. (Pa / inAq)	1544 / 6.20
Noise (dB-A) @ Qmax.(LwA)	90
Functions	
Active power factor correction	
Control input 0-10V _{DC} / PWM / 4-20mA.	
Output +10V _{DC} (±10%), max. 10mA.	
Control voltage output: 0-10V _{DC} .	
RS485 control bus (MODBUS RTU V1.3 / 8N1)	
Alarm relay, Locked rotor protection, Soft start.	
Speed telling, Frequency generator signal.	
Voltage / Current monitoring.	

Physical	
Rotation Direction	CW, Seen on rotor
Material (Impeller / Motor Frame)	Sheet Aluminum / Die-cast Aluminum
Material (Bracket / Nozzle)	Sheet steel / Plastic
Bearing system	Ball bearings
Weight (kg)	70
Electrical leads	Via terminal block
Environmental	
Operating temperature range	-25 ~ +40 °C
Storage temperature range	-40 ~ +70 °C
Safety	
Safety	UL , TUV , CE , UKCA
IP Level	IP54
EMC	EN61000-6-1/3
Protection class	I
Insulation class	F
Leakage current	≤ 3.5 mA
Motor protection	Over temperature protected
Life expectance	87,600 hrs at 40 °C / 15 ~ 65 %RH

NOTE : Delta reserves the right to change specifications and other product information without prior notice.

P & Q curves

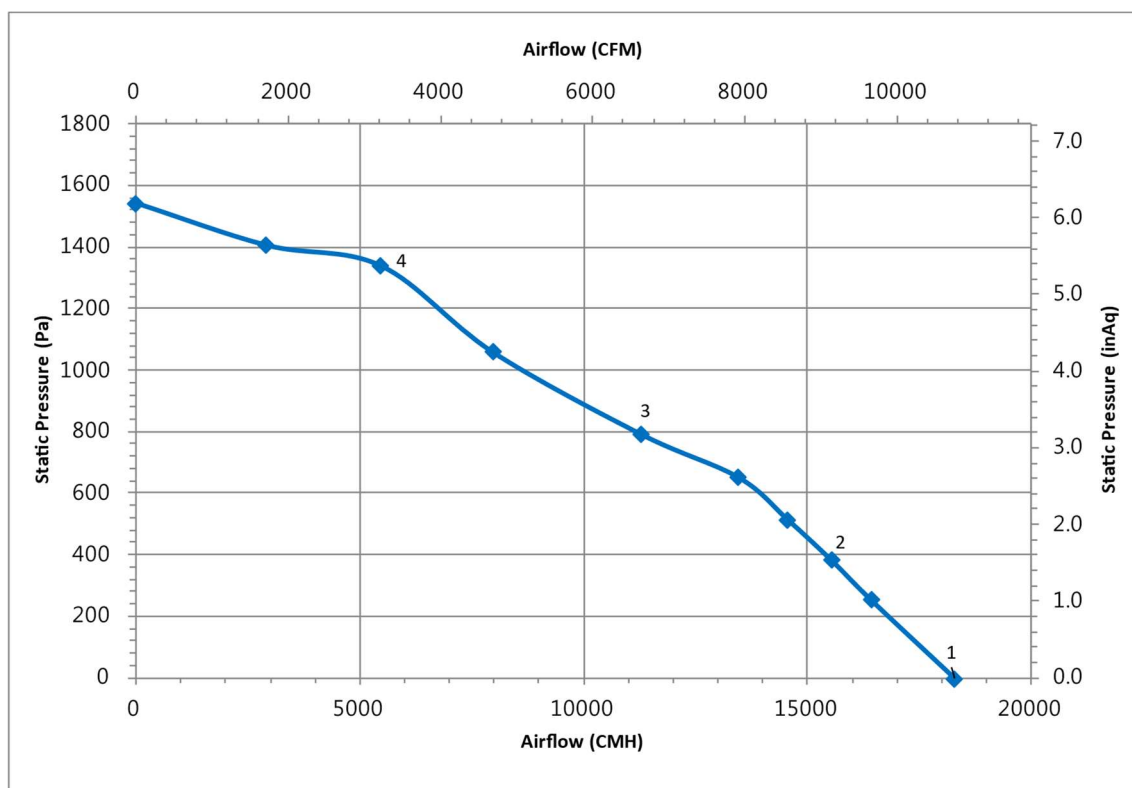

Measure data : AMCA

	P [Pa]	Q [CMH]	N [R.P.M.]	P1 [W]	I [A]	LwA [dB(A)]	FEI
1	0	18302	1676	1760	2.88	90	0.639
2	383	15552	1674	3144	4.63	90	1.335
3	793	11290	1606	3753	5.52	87	1.498
4	1340	5479	1661	3844	5.67	88	1.198

ErP Directive:


	Actual	2015
Over all Eff (%)	68.9	57.5
Eff Grade N	73.4	62.0
Power (kW)	3.753	
Air flow (CMH)	11290	
Pressure (Pa)	793	
Speed (RPM)	1606	

Note :


- Power P1 (W) : Motor input power.
- Input voltage / frequency : 400V / 50Hz-60Hz.
- Performance certified is for installation type A : free inlet, free outlet with partition. Performance ratings do not include the effects of appurtenances (accessories). Values shown are for inlet LwA sound power levels for installation type A : free inlet, free outlet with partition. The A-weighted sound ratings shown have been calculated per AMCA International Standard 301.

Dimension drawing

Label :

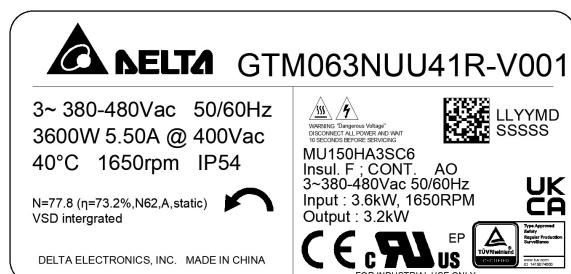

Fan :

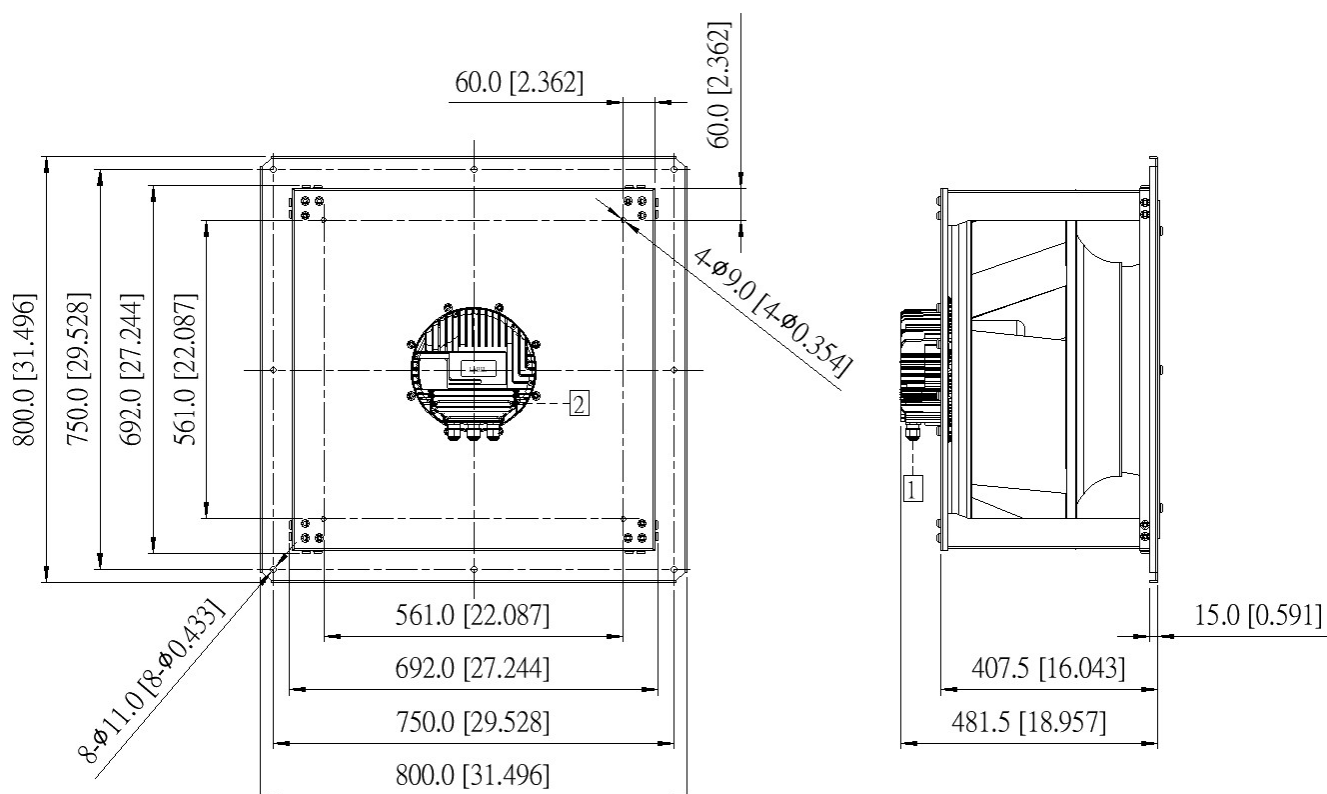


Note :

- 1 Cable diameter : $\phi 7.0 \sim \phi 12.7$ mm.
- 2 Open the cover and refer to definition of terminal block.


UNIT : mm[INCH]

Definition of terminal block

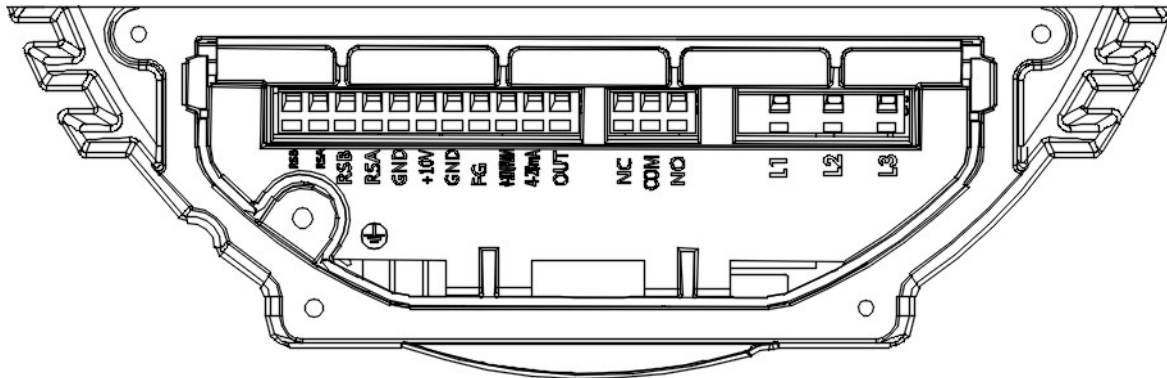






	Text	Functions
Power	L1	AC main (3~ 380-480VAC)
	L2	AC main (3~ 380-480VAC)
	L3	AC main (3~ 380-480VAC)
Status	NC	Alarm relay, open by failure
	COM	Alarm relay, common (2A/250VAC)
	NO	Alarm relay, close by failure
Signal	RSB	RS485-B
	RSA	RS485-A
	RSB	RS485-B
	RSA	RS485-A
	GND	Ground
	+10V	+10V output, MAX 10mA (For external potentiometer)
	GND	Ground
	FG	Frequency generator (FG) signal
	0-10V/PWM	Speed control, input 0-10VDC
	4-20mA	Speed control, input 4-20mA
	OUT	Control voltage output 0-10VDC (For external potentiometer)


Lead wire connection:

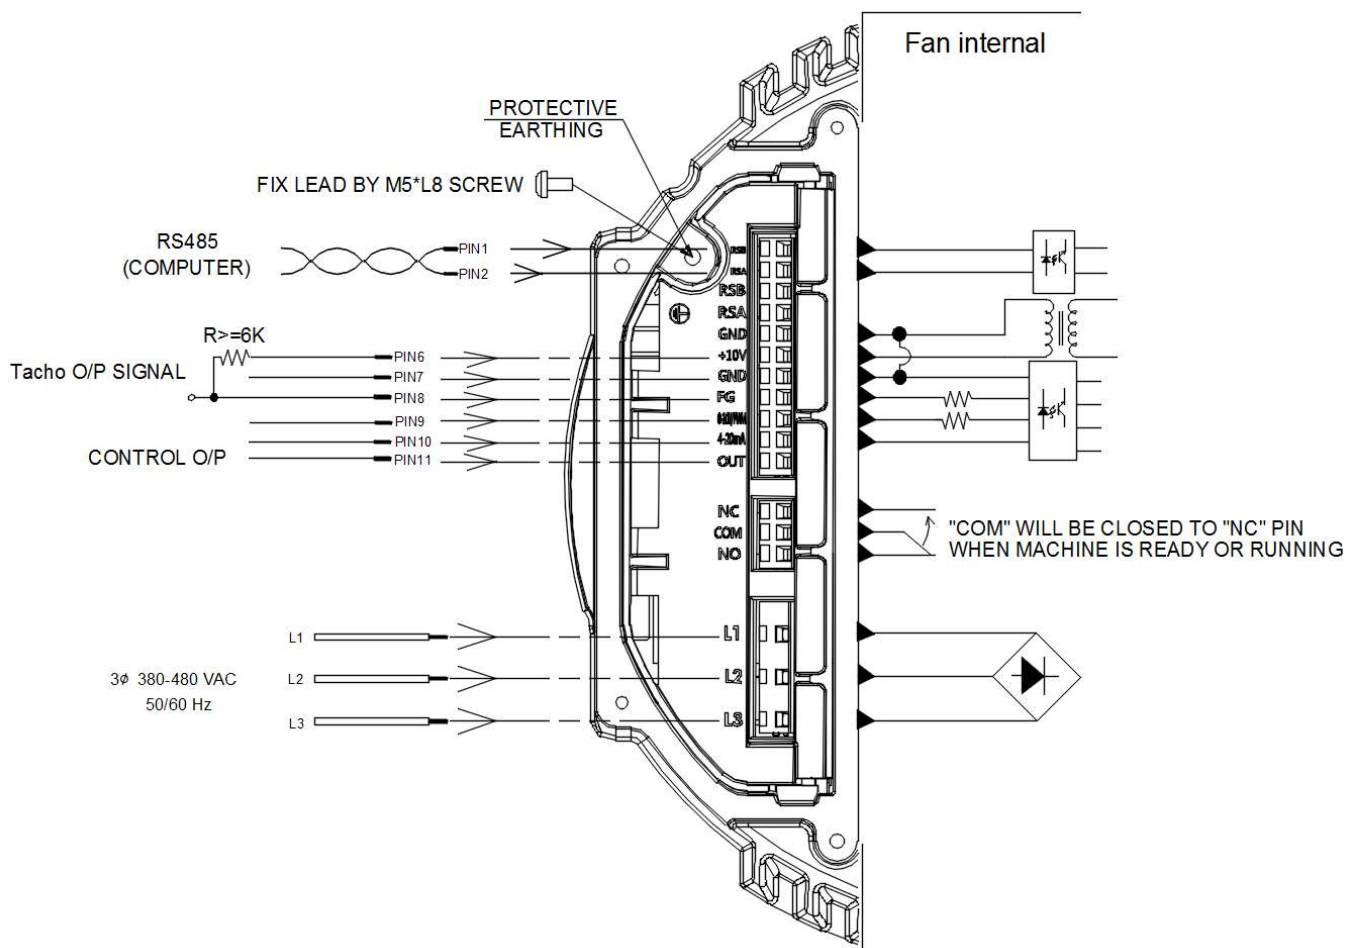


Note:

1. A MODBUS over Serial Line Cable must be shielded. At one end of each cable its shield must be connected to protective ground.

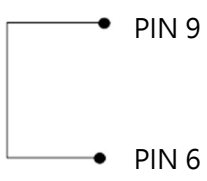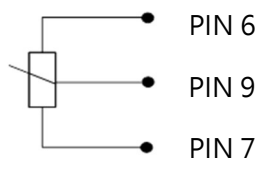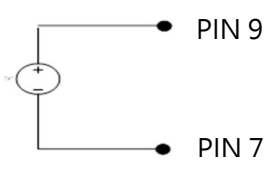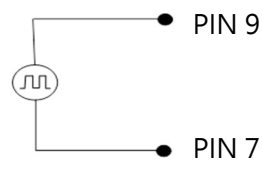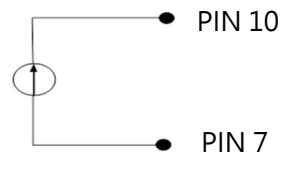Speed setting	
Full Speed 	Short PIN6 & PIN9 Fan will run full speed.
Voltage Control A 	Connector 1-10kΩ variable resistor Between +10VDC with GND and 0-10V/PWM Turn the variable resistor, can change the ' 0-10V/PWM ' voltage (0...10V) °
Voltage Control B 0-10V DC Source 	Use voltage source support 0~10VDC voltage DC+ : connector PIN9(+) DC - : connector PIN7(-)
PWM Control PWM Generator 	PWM duty control PWM amplitude is 10VDC (+ -5%) Frequency Range is 100Hz...100kHz -PWM duty higher than 15%, fan start up ° -PWM duty lower than 5%, fan stop °
Current Control 4-20mA Current Source 	4~20mA Current Control Open 0-10V/PWM PIN - 4.5 mA → Fan Stop - 6.0 mA → Fan Start up - 19.5 mA → Maximum Speed

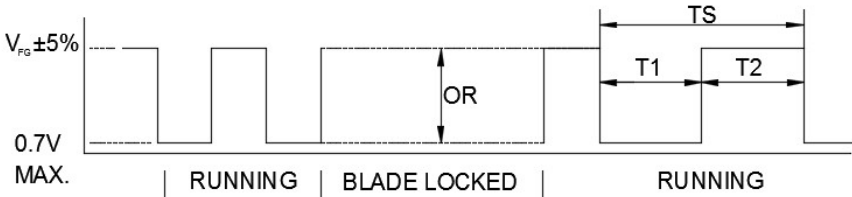Signal function			
RS485 control function	RS485 control function -Select the control mode of speed, fixed speed or fixed PWM duty -Speed and power consumption feedback. -Allow multiple FANs control and status patrol.		
Control O/P	The analog signal level is the derivative of current control level at Nominal Voltage		
	Current (mA)	Control O/P (VDC)	
	4.0	0	
	6.3	1.60	
	14.0	6.03	
	19.5	9.19	
Voltage/PWM control	The speed comparison will control level at Nominal Voltage		
	Voltage (V)	PWM (%)	Speed (RPM)
	0	0	0
	1.5	15	100 ± 50 RPM
	6.0	60	1000 ± 8%
	9.5	95	1650 ± 5%
Current control	The speed comparison will control level at Nominal Voltage		
	Current (mA)	Speed (RPM)	
	4.0	0	
	6.3	100 ± 50 RPM	
	14.0	1000 ± 8%	
	19.5	1650 ± 5%	
Alarm state	NC and COM will OPEN; NO and COM will CLOSE.		
FG	$V_{CE(sat)} = 0.7V \text{ MAX.}$ $I_C = 5mA \text{ MAX.}$ $V_{FG} = 30.0V \text{ MAX.}$ $R \geq V_{FG} / I_C$ Frequency generator waveform  The diagram shows a square wave signal V_FG. The high level is V_FG ±5% and the low level is 0.7V MAX. The signal is active during 'RUNNING' states and inactive during 'BLADE LOCKED'. The period of the pulse is TS, and the pulse width is T1. The time between the end of one pulse and the start of the next is T2. N=R.P.M TS=60/N(SEC) 1 PULSE PER REVOLUTION T1=T2=1/2 TS		

Control Voltage VS. RPM Curve at Nominal Voltage

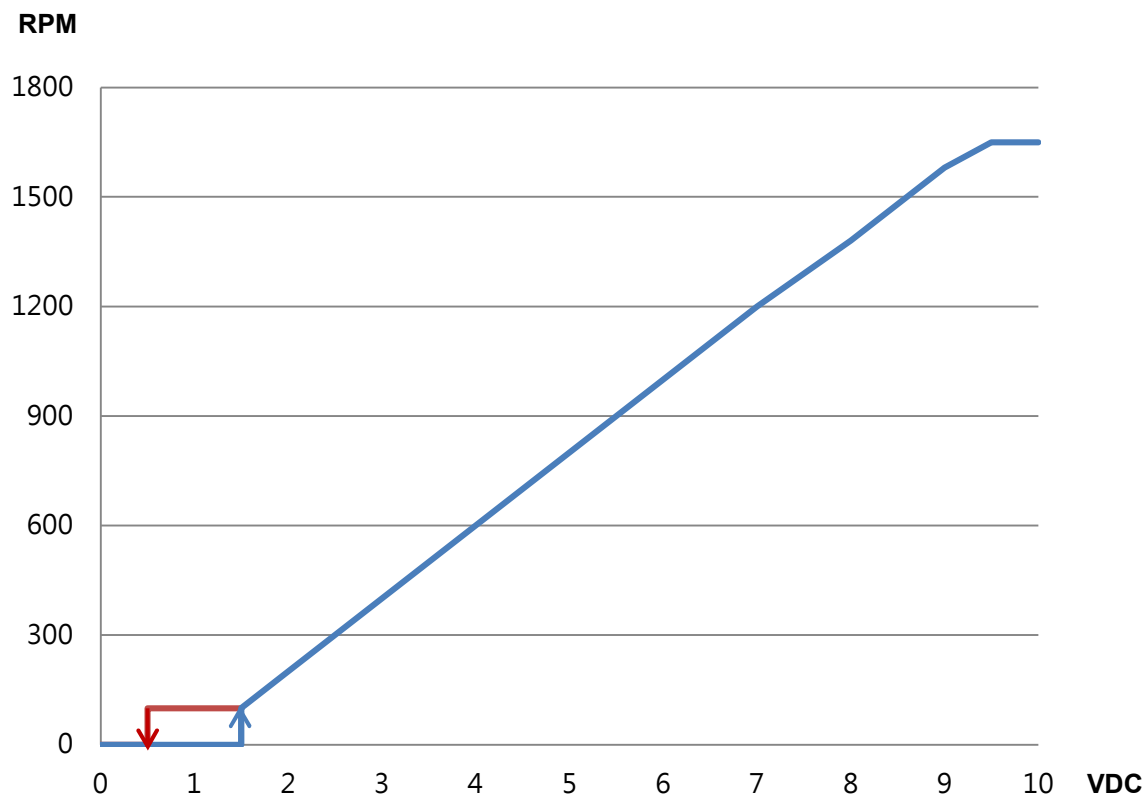

Voltage (VDC), PWM duty (%), 4~20mA table

Voltage	0	0.5	1	1.5	2	3	4	5	6	7	8	9	10	VDC
PWM duty	0	5	10	15	20	30	40	50	60	70	80	90	100	%
4~20 mA	4	5	5.6	6	7.2	8.8	10.4	12	13.6	15.2	16.8	19	20	mA

1. 注意事項

Attention Item!!

為了確保能夠正確地安裝及操作風扇，請在裝機之前，詳細閱讀本產品說明，避免造成人員傷害或是機器損壞。

In order to ensure the fan installation and operation is correct. Please read this instruction carefully to avoid staff or machine damage

1.1 基本安全規範

Basic safe regulation

- 只有合格的電機專業人員才可以對風扇進行安裝、配線、修理及保養，請防止非技術人員接近風扇。

Only qualified professional staff can install, repair and maintain the fan.

Please prevent non-technical person to carry on action above.

- 禁止自行改裝風扇內部的零件或線路，也不可將風扇拆解為零部件單獨使用，以免發生危險。

Prohibit to modify internal parts or circuits of fan by self, nor disassemble fan into parts and use it separately.

- 禁止對於風扇外表做額外的塗裝。

Prohibit to increase additional painting/coating on fan.

- 不正確的安裝方式可能導致風扇的損害。

It is possible to damage fan with wrong install way.

1.2 安全項目確認

Safety check



- 定期檢查設備的電氣設備時，立即更換鬆動的連接和有缺陷的電纜。

Change connect part or cable if defect found during regular inspection.

- 在帶電設備上工作時，請站在橡膠墊上，避免觸電的危險。

	When working on live equipment, please stand on non-conductive carpet (ex: rubber mat) to avoid risk of electric shock ● 電源關閉後，應在斷開所有電力後，並等待五分鐘後再操作風扇，避免觸電危險。 After turning off fan power, please check fan till five minutes later to avoid risk of electric shock. ● 風扇本體雖有基本絕緣防護，但發生異常狀況時，仍有帶電的風險，請使用檢測儀器確認安全後，再行作業。 Although the fan body has basic insulation protection, there is still a risk of electrification when abnormal conditions occur. Please use testing instruments to confirm safety before operating. ● 若風扇配有端子接線盒，啟動風扇前，請務必確認接線盒上蓋有確實安裝。 If the fan body include terminal box, please make sure that the top cover of box already installed properly before turning on the fan. ● 本風扇在使用前，請務必確實接地。接地的導線截面積不得少於 0.75mm² (18AWG min)。 Must have grounding check before using. And section area of ground wire cannot lower than 0.75mm² (18AWG min)
--	---



注意：扇葉是可旋轉物件，碰觸到人體或是物件有受傷的風險！！

Attention: Here is risk to hurt human body when rotating impeller in touch with.

- 執行作業時，必須關閉電源線路等到設備完全停止，並確保風扇無法開啟，並在作業完畢後，移除所有的工具。

When performing work, you must turn off the power line and wait until the equipment is completely stopped, and make sure that the fan cannot be turned on, and remove all tools after the work is completed

- 風扇在通電後，會因為存在控制電壓或是上一次啟動時儲存的速度設定，風扇可能會立即運轉，請在風扇通電前，應再確認人員與其他物品已不在風扇周邊危險區域內。

After turn on power, fan may run immediately due to control voltage or last speed setting stored at the fan, so please confirm that people and objects already keep safety distance with fan before start up.

- 當風扇須加裝防護罩，此防護罩必須符合成品的相關規範，避免人員碰觸到扇葉；有意外狀況時，保護罩也可避免破裂物或是吸入物射出造成危險。

If need to have an additional protect cover on fan, it must comply with the relevant specification of finished product to prevent people from touching the fan blades; in case of accidents, the protect cover can also

	prevent the danger caused by the ejection of broken objects or inhaled objects ● 請小心長髮或是寬鬆衣物被捲入，可能導致人員受傷。 Be careful that long hair or loose clothing entangled by fan, which may cause people injury. ● 風扇與周遭零件的距離應保持 25mm 以上。 Distance between fan and surrounding parts should keep at least 25mm
--	---

1.3 其他注意事項

Others

	● 電機殼體表面會發熱產生高溫，可能造成燙傷，請適當施加保護裝置並避免直接碰觸。 Fan motor will have heat near when operating, it possible to cause burned on body. So suggest to add protect item and avoid to touch motor body. ● 風扇運轉時，可能會產生高分貝噪音，嚴重時，可能會導致人員聽力受損；請採取隔音或是保護措施。 It' s possible to have serious noise when fan operating. Please take soundproofing or protective mechanism to avoid hearing impaired ● 請確認整個設置符合 EMC 標準，在系統上採取適當屏蔽措施。
---	---

	Please confirm that the entire setup complies with EMC standards, and take appropriate shielding on the system ● 運送風扇時，請使用原包裝，並維持包裝方向避免任何形式翻轉，工作人員請穿著安全手套與安全鞋，避免割傷與撞傷。 When transporting fan, please use original packaging material, and keep fan packaging the same as open in beginning. The staff should wear proper gloves and shoes to avoid cuts and bumps. ● 固定用螺絲建議具有防鬆的機制。 Please use screw with anti-loosening mechanism to install fan ● 此風扇屬於散熱零件，僅適用於系統內，不可單獨使用。 This fan is a cooling part and only be used in system. Please do not use it away from system. ● 風扇可提供空氣輸送功能，並可協助系統散熱，其他任何使用方法皆不符合此風扇的適用範圍內 This fan only use for air moving and heat dissipation of system, not use for other purpose. ● 風扇所屬的系統必須提供足夠的結構支撐能力。 The system must have sufficient structural strength to support fan install inside.
--	--

	● 風扇本體在使用中會發熱，系統周圍零件必須有一定的耐熱能力 Fan body will create heat when using, so the part near by must have ability to suffer that. ● 確保所有的保護裝置有適當的安裝。 Ensure that all protective devices are properly installed ● 建議執行定期檢查。 Please perform regular maintenance checks if necessary.
--	--

➤ **請避免**風扇使用在以下範圍

Avoid to use in field below

- 使用環境內具有腐蝕、易燃性之氣、液體、漂浮性的塵埃及金屬微粒。
Environment with Corrosion, flammable gas and liquid, Floatable dust and metal particles
- 遭受劇烈的震動，包括使用中，運送或是安裝過程中。
Environment with series vibration include transfer and install process.
- 用於醫療相關設備，或是與生命安全關聯的設備中
Medical related equipment, or equipment related to life safety

1.4 儲存

Storage

- 必須置於乾燥與乾淨的環境，建議置於穩固的臺架上。
Fan must be placed in a dry and clean environment, and recommended to place it on a stable stand
- 避免儲存於含有腐蝕性氣、液體之環境中。

Avoid to store in environments containing corrosive gases and liquids

- 避免存放於陽光直射或有振動的場所。

Avoid storing in direct sunlight or places with vibration

- 請避免在無通電的狀態下放置一年以上，風機內電解電容長期不通電，可能會產生劣化。

Avoid leaving it without power for more than one year. The electrolytic capacitor inside the fan may deteriorate if it doesn't power on for a long time.

- 若風扇裝設於系統，有使用電纜固定接頭(cable gland)，請確保防水橡膠有正確安裝。

If the fan is installed with cable gland, please ensure that the waterproof rubber of gland is properly installed.

- 儲存位置的環境溫度範圍請參考各機種規格書。

For the ambient temperature range of storage, please refer to the data sheet of each model