

Schwank Select14 Series Air Curtain



The air curtains shown herein are licensed to bear the AMCA Seal. The ratings shown are based on tests and procedures performed in accordance with AMCA Publication 211 and AMCA Publication 311 and comply with the requirements of the AMCA Certified Ratings Program. The AMCA Certified Ratings Seal applies to airflow rate, average outlet velocity, outlet velocity uniformity, velocity projection and power rating at free delivery only.

→ Technical Specification

🌸 Ambient, no heat - (IP21)

Model	Output (MBH)	Airflow*1 (CFM)	Sound power*2 (dB(A))	Sound Pressure (dB(A))	Motor power (W)	Voltage motor (V)	Amperage motor (A)	Weight (lb)
AC-VA36-23	0	1400	80	62	500	208V1~	3.0	84
AC-VA60-23	0	1950	81	63	673	208V1~	4.5	108
AC-VA72-23	0	2800	82	64	1000	208V1~	6.0	141
AC-VA96-23	0	3300	83	65	1173	208V1~	7.5	172

⚡ Electrical heat - (IP20)

Model	Output (kW)	Airflow*1 (CFM)	Sound power*2 (dB(A))	Sound Pressure (dB(A))	FLA (full load amperage) *3 (A)	Motor power (W)	Amperage motor (A)	Voltage (V) Amperage (A) (heat)	Weight (lb)
AC-VE36-20	4/10	1400	80	62	31	500	3.0	208V3~/27	93
AC-VE60-20	5/15	1950	81	63	45	673	4.5	208V3~/40	126
AC-VE72-20	7/20	2800	82	64	60	1000	6.0	208V3~/54	172
AC-VE36-48	4/12	1400	80	62	18	500	3.0	480V3~/15	104
AC-VE60-48	6/18	1950	81	63	27	673	4.5	480V3~/22	137
AC-VE72-48	8/24	2800	82	64	35	1000	6.0	480V3~/29	185
AC-VE96-48	10/30	3300	83	65	45	1173	7.5	480V3~/37	234
AC-VE36-60	4/12	1400	80	62	15	500	3.0	600V3~/12	104
AC-VE60-60	6/18	1950	81	63	23	673	4.5	600V3~/18	137
AC-VE72-60	8/24	2800	82	64	30	1000	6.0	600V3~/24	185
AC-VE96-60	10/30	3300	83	65	38	1173	7.5	600V3~/30	234

💧 Water heat - (IP21)

Model	Output*4 (MBH)	Airflow*1 (CFM)	Sound power*2 (dB(A))	Sound Pressure (dB(A))	Motor power (W)	Voltage motor (V)	Amperage motor (A)	Water volume (US gal)	Weight (lb)
AC-VW36-23	55	1300	79	61	501	208V1~	3.0	0.49	99
AC-VW60-23	85	1900	79	61	666	208V1~	4.0	0.78	123
AC-VW72-23	119	2600	81	63	1002	208V1~	6.0	1.09	163
AC-VW96-23	150	3150	81	63	1167	208V1~	7.0	1.37	212

1. Highest airflow of totally 5 fan steps.
2. Values shown are for total sound power levels for Installation Type A: free inlet, free outlet.
3. The Sound power level ratings shown are in decibels, referred to 10-12 watts.
4. FLA: total amperage for motor and heat.
5. Applicable at water temperature 140/104F, air temperature, in +64F.

Above table is valid for 208V/1ph/60Hz. Also approved for 230V/1ph/60Hz.
Product performance for 230V/1ph/60Hz will differ from stated data.

Protection class for units with electrical heating: IP20.

Protection class for units without heating and units with water heating: IP21.

→ Technical Specification

Model	Nozzle width x depth(in)	Max Velocity at nozzle (fpm)	Outlet Velocity (fpm)	Outlet Velocity Uniformity (%)
AC-VA36-23	37.8x2.8	3133	2736	89
AC-VE36-20(48)(60)	37.8x2.8	3133	2736	89
AC-VA60-23	57.9x2.8	3053	2665	87
AC-VE60-20(48)(60)	57.9x2.8	3053	2665	87
AC-VA72-23	77.2x2.8	3133	2736	89
AC-VE72-20(48)(60)	77.2x2.8	3133	2736	89
AC-VA96-23	97.2x2.8	3094	2700	88
AC-VE96-48(60)	97.2x2.8	3094	2700	88
AC-VW36-23	37.8x2.8	2531	2263	85
AC-VW60-23	57.9x2.8	2994	2501	87
AC-VW72-23	77.2x2.8	2531	2263	85
AC-VW96-23	97.2x2.8	2763	2328	86

Model	Fan speed	Airflow (CFM)	Output (MBH)	Return water temp.(°F)	Water flow (GPM)	Pressure drop (kPa)	Output*2 (MBH)	Outlet air temp.(°F)	Water flow (GPM)	Pressure drop (kPa)
AC-VW36-23	max	1530	50.9	88	1.2	2.7	96.9	122	5.5	40.5
AC-VW60-23	max	2000	65.9	84	1.4	1.6	137.2	127	7.7	30.6
AC-VW72-23	max	2855	96.6	86	2.2	1.6	193.2	127	10.9	26.9
AC-VW96-23	max	3090	104.4	81	2.2	2.0	223.5	131	12.7	42.0

Supply water temperature: 176 °F
 Room temperature: +64 °F
 Outlet air temperature: +95 °F¹


Water temperature: 176/140 °F
 Room temperature: +64 °F

Model	Fan speed	Airflow (CFM)	Output (MBH)	Return water temp.(°F)	Water flow (GPM)	Pressure drop (kPa)	Output*2 (MBH)	Outlet air temp.(°F)	Water flow (GPM)	Pressure drop (kPa)
AC-VW36-23	max	1530	52.6	99	156.9	11.5	56.3	99	190.2	16.2
AC-VW60-23	max	2000	68.6	95	183.6	6.2	79.9	100	269.2	12.2
AC-VW72-23	max	2855	96.6	95	257.8	5.5	112.3	100	379.5	10.7
AC-VW96-23	max	3090	105.5	95	257.8	6.5	132.1	104	447.0	17.2

Supply water temperature: 140 °F
 Room temperature: +64 °F
 Outlet air temperature: +95 °F¹

Water temperature: 140/104 °F
 Room temperature: +64 °F

1. Recommended outlet air temperature for good comfort and optimized output.
2. Nominal output at given supply and return water temperature.

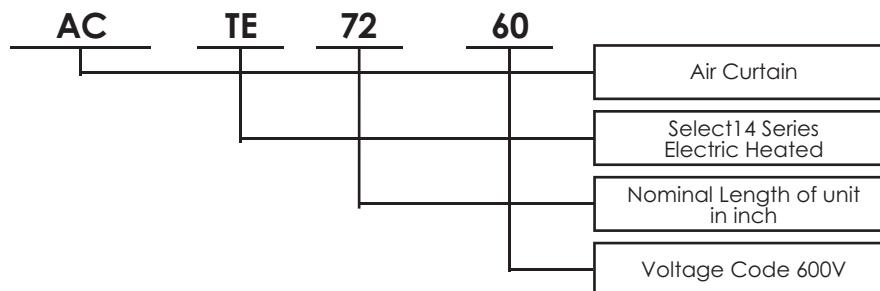







The introduction pages consist mainly of pictures.
For translation of the English texts used, see the respective language pages.



Les pages de présentation contiennent principalement des images.
Pour la traduction des textes en anglais, consultez la page correspondante à la langue souhaitée.

→ Dimensions

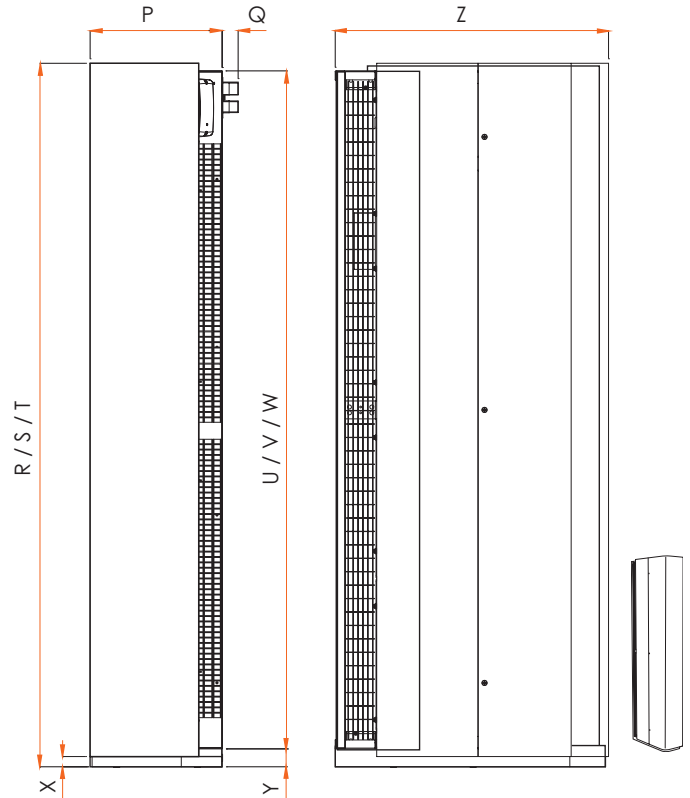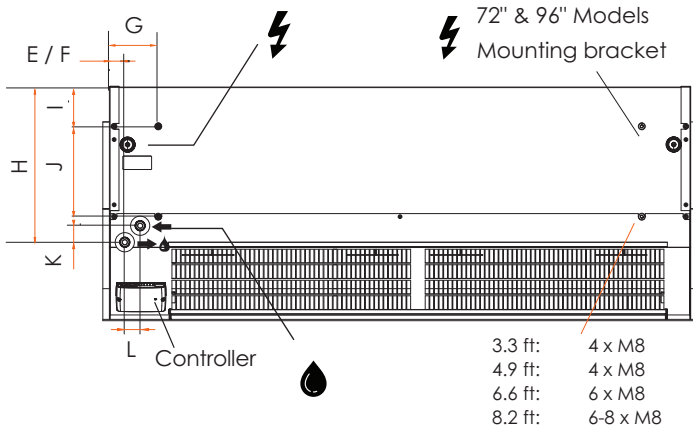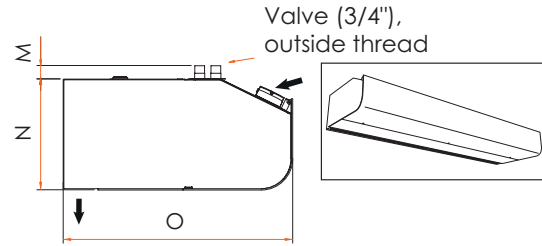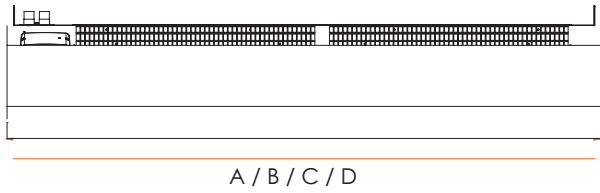

Ref	(inch)	Model	Ref	(inch)	Model	Ref	(inch)	Model
A	41.56	AC-VA36-23	F	1.56	AC-VA96-23	T	102.88	AC-VA96-23
	41.56	AC-VE36-20(48)(60)		1.56	AC-VE96-48(60)		102.88	AC-VE96-48(60)
	41.56	AC-VW36-23		1.56	AC-VW96-23		102.88	AC-VW96-23
B	61.96	AC-VA60-23	G	5.08	All Models	U	60.6	AC-VA60-23
	61.96	AC-VE60-20(48)(60)	H	16.16	All Models		60.6	AC-VE60-20(48)(60)
	61.96	AC-VW60-23	I	4.08	All Models		60.6	AC-VW60-23
C	81.56	AC-VA72-23	J	9.4	All Models	V	80.16	AC-VA72-23
	81.56	AC-VE72-20(48)(60)	K	1.72	All Models		80.16	AC-VE72-20(48)(60)
	81.56	AC-VW72-23	L	1.6	All Models		80.16	AC-VW72-23
D	101.96	AC-VA72-23	M	1.44	All Models	W	100.6	AC-VA96-23
	101.96	AC-VE96-48(60)	N	11.8	All Models		100.6	AC-VE96-48(60)
	101.96	AC-VW96-23	O	24.44	All Models		100.6	AC-VW96-23
E	1.60	AC-VA36-23	P	11.8	All Models	X	0.92	All Models
	1.60	AC-VE36-20(48)(60)	Q	1.44	All Models	Y	1.6	All Models
	1.60	AC-VW36-23	R	62.88	AC-VA60-23	Z	24.44	All Models
	1.60	AC-VA60-23		62.88	AC-VE60-20(48)(60)			
	1.60	AC-VE60-20(48)(60)		62.88	AC-VW60-23			
	1.60	AC-VW60-23	S	82.48	AC-VA72-23			
	1.60	AC-VA72-23		82.48	AC-VE72-20(48)(60)			
	1.60	AC-VE72-20(48)(60)		82.48	AC-VW72-23			
	1.60	AC-VW72-23						

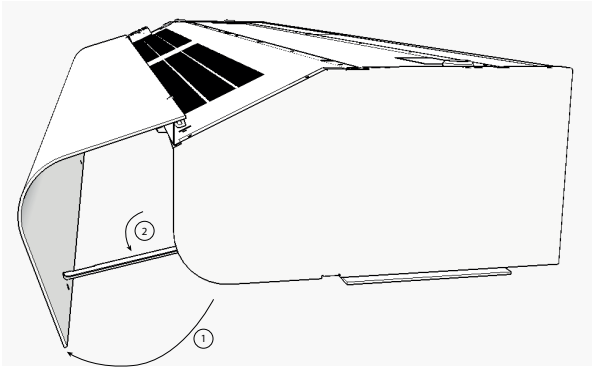


Fig. 1A: Open the unit by raising the front panel. The front is blocked in open position with the front hatch hook.

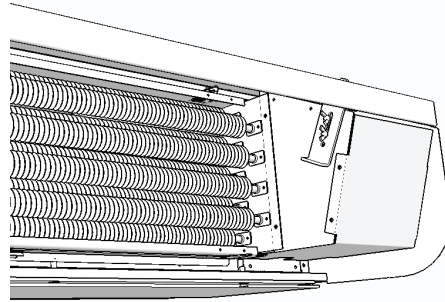


Fig. 1B: When the front has been removed it is important to be sure it is firmly seated in the front locks again.

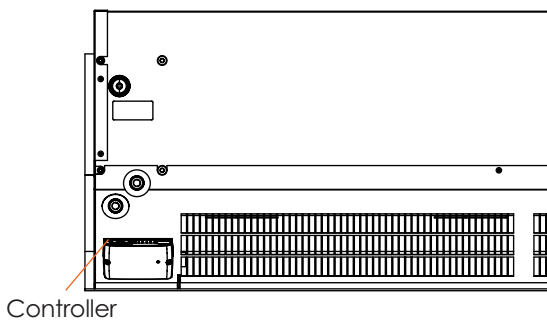


Fig. 2: Control card controller is integrated in the air curtain at delivery.

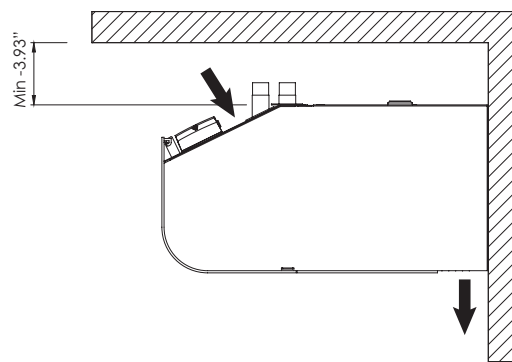


Fig. 3: Minimum distance.

→ Filing the water coil



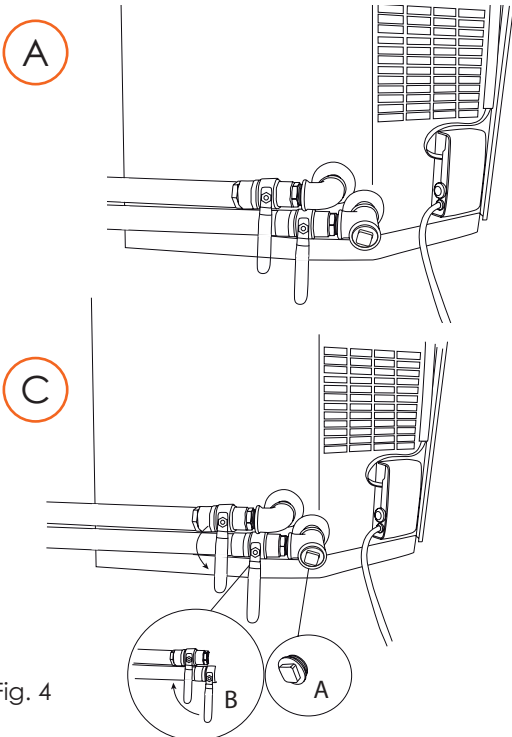


Fig. 4

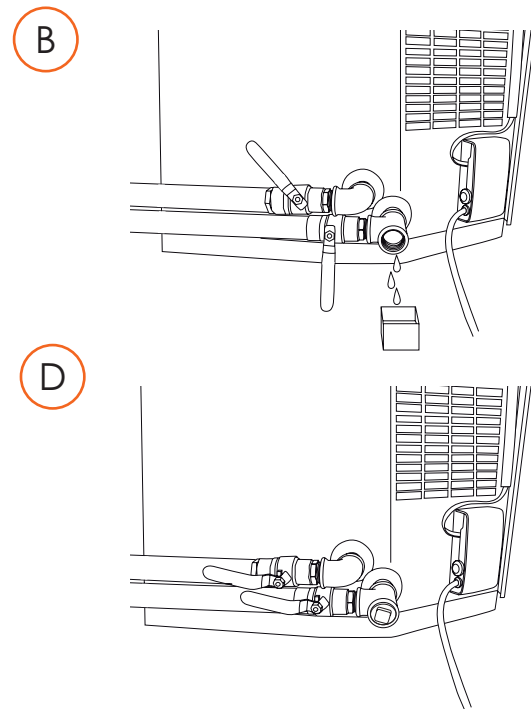


All Models: 36" & 60"

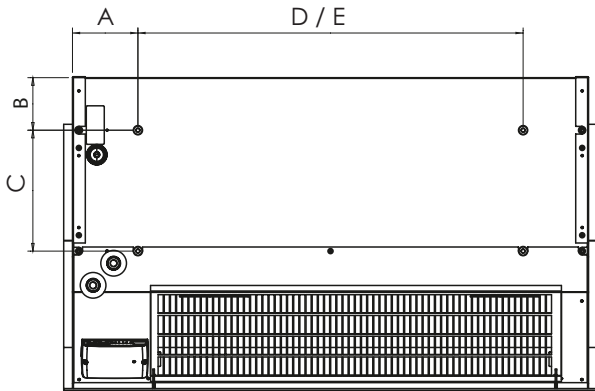

Ref	(inch)	Model	Ref	(inch)	Model
A	5.08	All Models	F	35	All Models
B	4.08	All Models		35	All Models
C	9.4	All Models		35	All Models
D	30	AC-VA36-23	G	29.8	AC-VA96-23
	30	AC-VE36-20(48)(60)		29.8	AC-VE96-48(60)
	30	AC-VW36-23		29.8	AC-VW96-23
E	50.4	AC-VA60-23	H	30.8	AC-VA96-23
	50.4	AC-VE60-20(48)(60)		30.8	AC-VE96-48(60)
	50.4	AC-VW60-23		30.8	AC-VW96-23

All Models: 72"

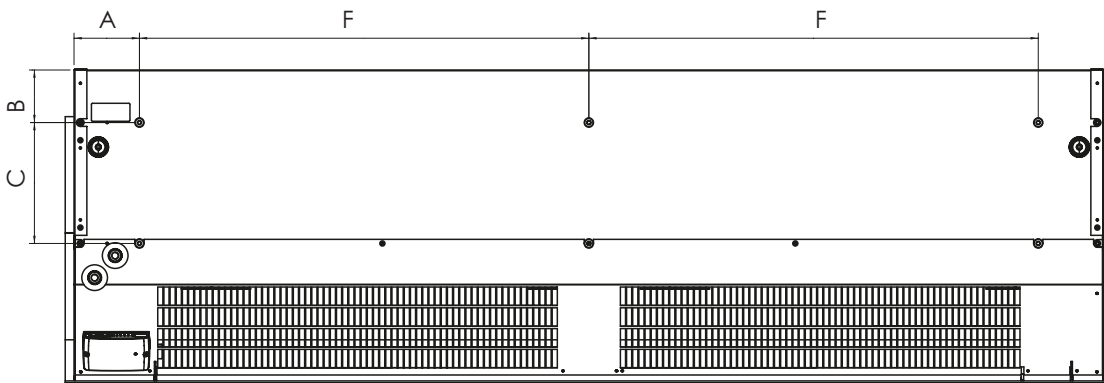

All Models: 96"




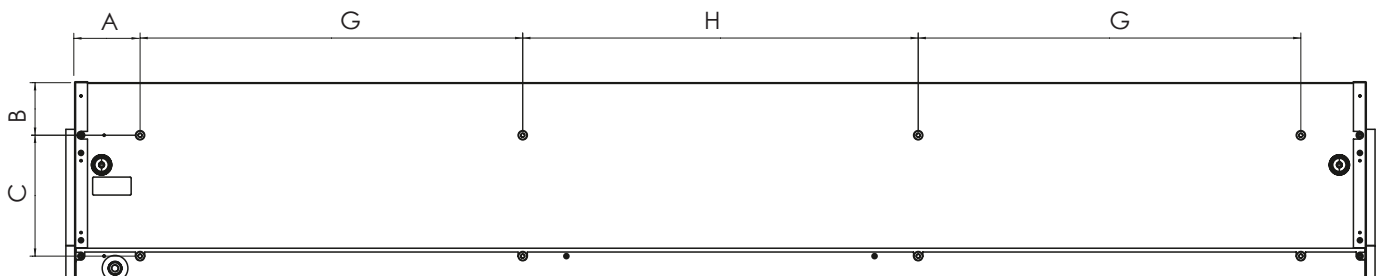


Fig. 5: M8-holes for mounting.

→ Accessories

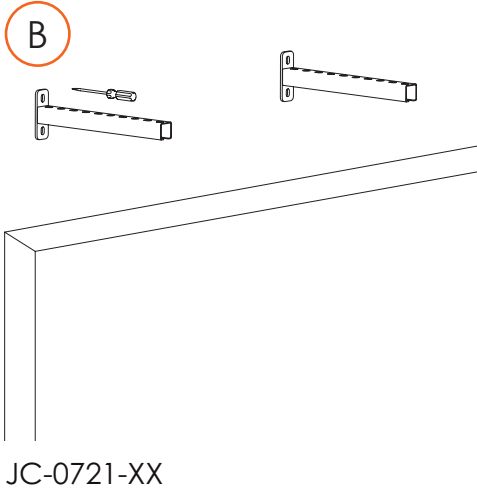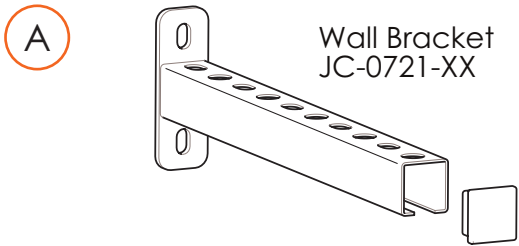

Ref	(inch)
A	0.43
B	0.75
C	3.15
D	1.58
E	1.58
F	4.72

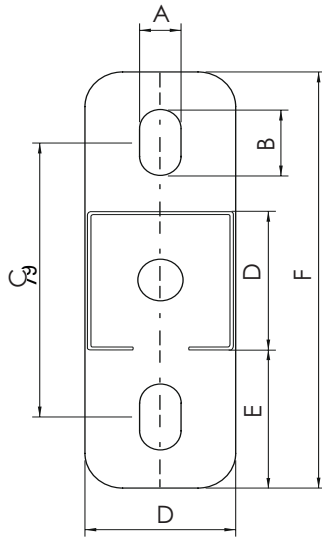

Wall Bracket Model	Product type	Quantity included
JC-0721-15	36" & 60" Models	2 pcs
JC-0721-20	72" Models	3 pcs
JC-0721-30	96" Models	4 pcs

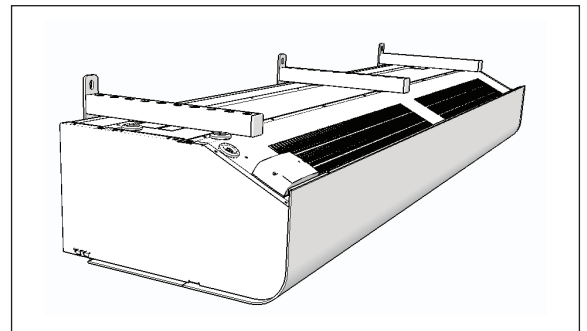
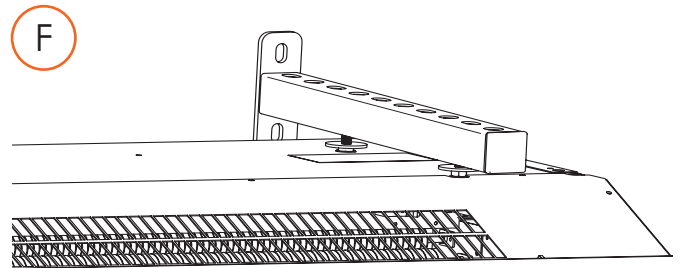
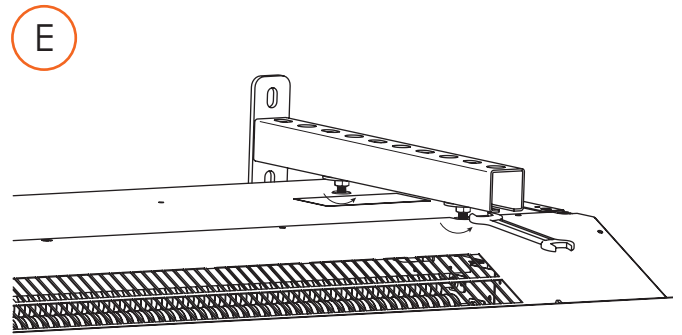
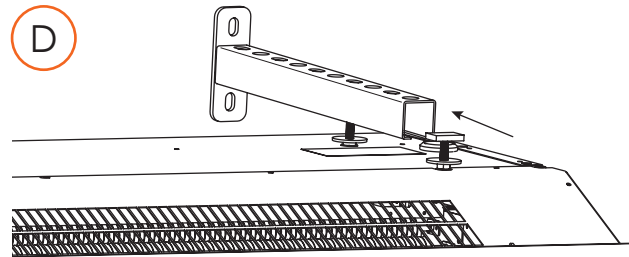
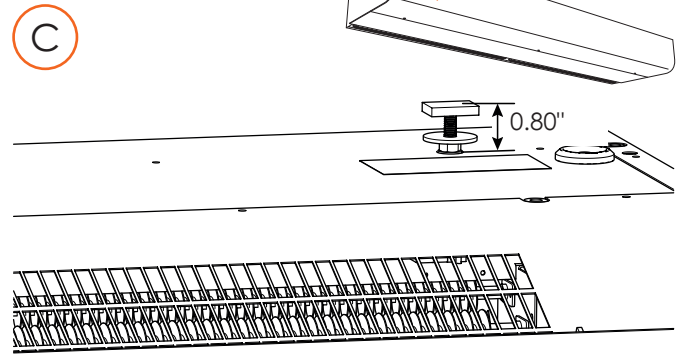


Fig. 6

→ **Accessories**

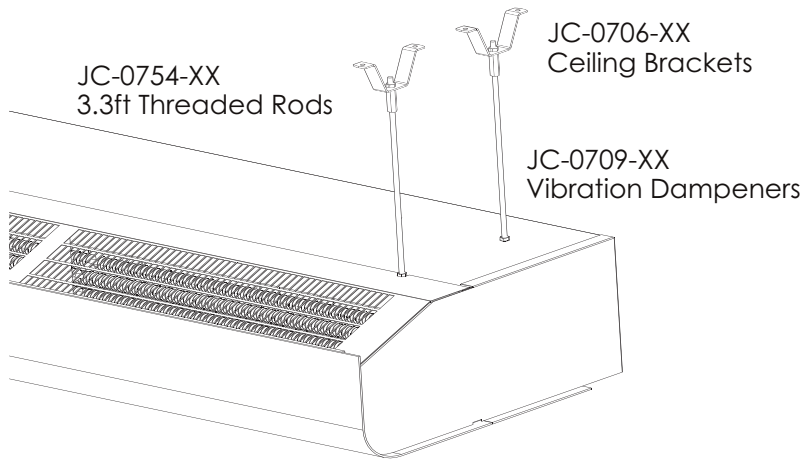


Fig. 7

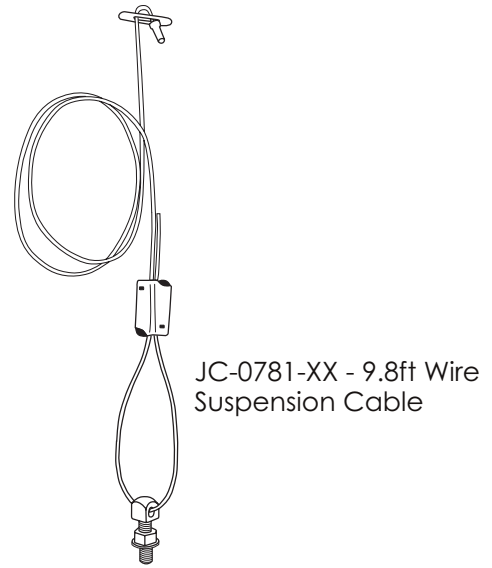


Fig.8

Ceiling Bracket Model	Air Curtain Models:	Quantity included
JC-0706-15	36" & 60" Models	4 pcs
JC-0706-20	72" Models	6 pcs
JC-0706-30	96" Models	8 pcs

Vibration Dampener Model	Air Curtain Models:	Quantity included
JC-0709-15	36" & 60" Models	4 pcs
JC-0709-20	72" Models	6 pcs
JC-0709-30	96" Models	8 pcs

JC-0724-XX Vertical Mounting Kit

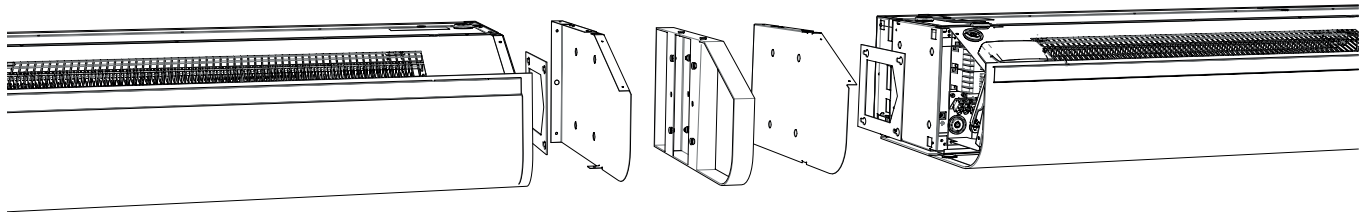


Fig. 9

→ Accessories

Nozzle Extensions Model	Models
JC-0725-10	All 36" Models
JC-0725-15	All 60" Models
JC-0725-20	All 72" Models
JC-0725-25	All 96" Models



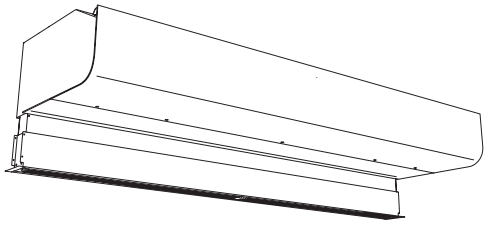


Fig. 10



Design Kit Ceiling Model	Length (inch)	Kit Height (ft)
JC-0712-10	8.00-12.00	0.6-1.0
JC-0712-15	12.00-20.00	1.0-1.6
JC-0712-20	20.00-36.00	1.6-3.0

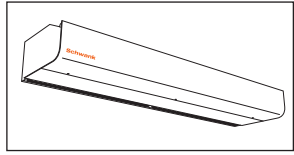


JC-0712-XX
Single Piece Design Kit Ceiling

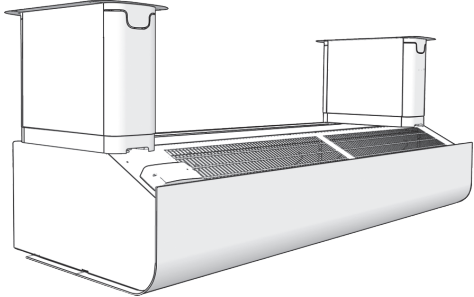

→ Accessories

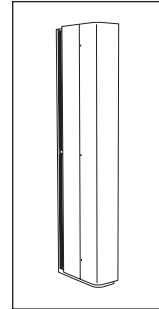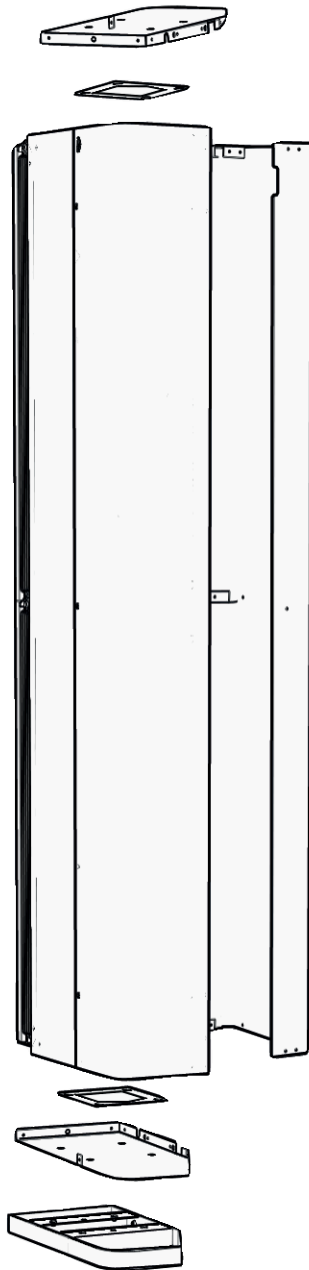

NOTE: The air curtain must be secured in the wall or ceiling.

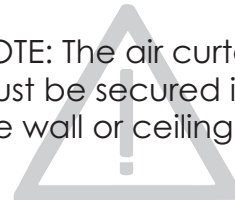


JC-0724-XX Vertical (Floor) Mounting Kit

- Used to adapt a horizontal unit for vertical installation.
- Includes floor frame and mounting parts to support the top.
- Vertical kit allows two units to be installed on top of each other.
- One vertical kit is needed per unit.


Fig. 11

→ Accessories

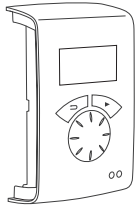


JC-0749-XX - Select14 Series
Controller - Ambient Models


JC-0750-XX - Select14 Series
Controller - Heated Models



JC-0745-XX
Return Water Temp. Sensor



JC-0742-XX
Temperature Sensor

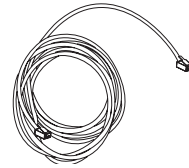


JC-0732
RJ12 Cable next to JC-0732-XX
(Different Lengths Available)

JC-0751-XX - 3/4 Plumbing Kit

Includes:


- Valve kit: TAC, pressure independent regulation and adjustment valve + shut off valve
- Nipple connection for valve, female thread (x2)
- Actuator ON/OFF 230V
- Bypass valve

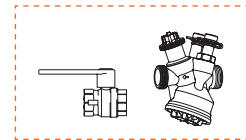

JC-0751-XX Water Heated Plumbing Kit




Wiring Diagram - Schwank Select14 Series Air Curtain Ambient & Water Heated

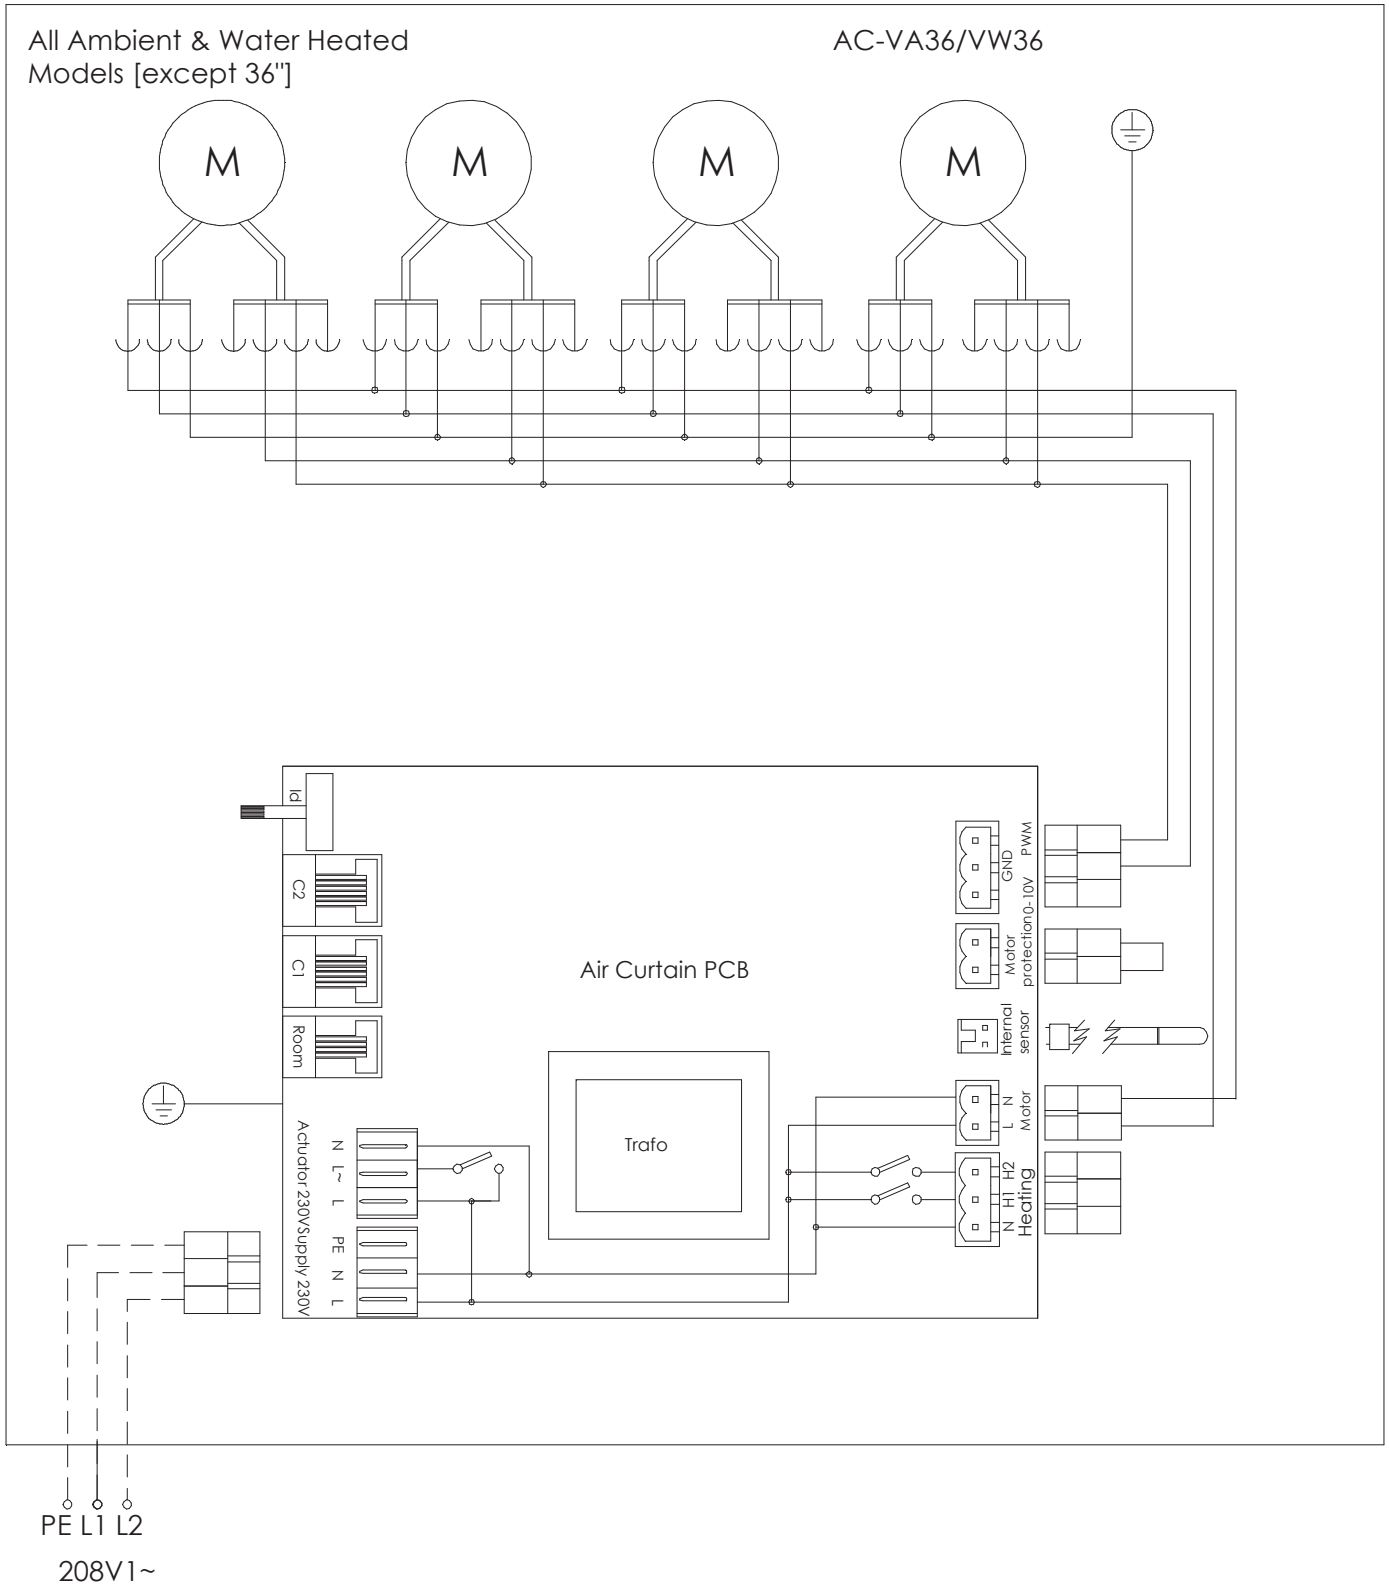


Wiring Diagram - Schwank Select14 Series Air Curtain

- 36" & 60" Electric Heated 208V

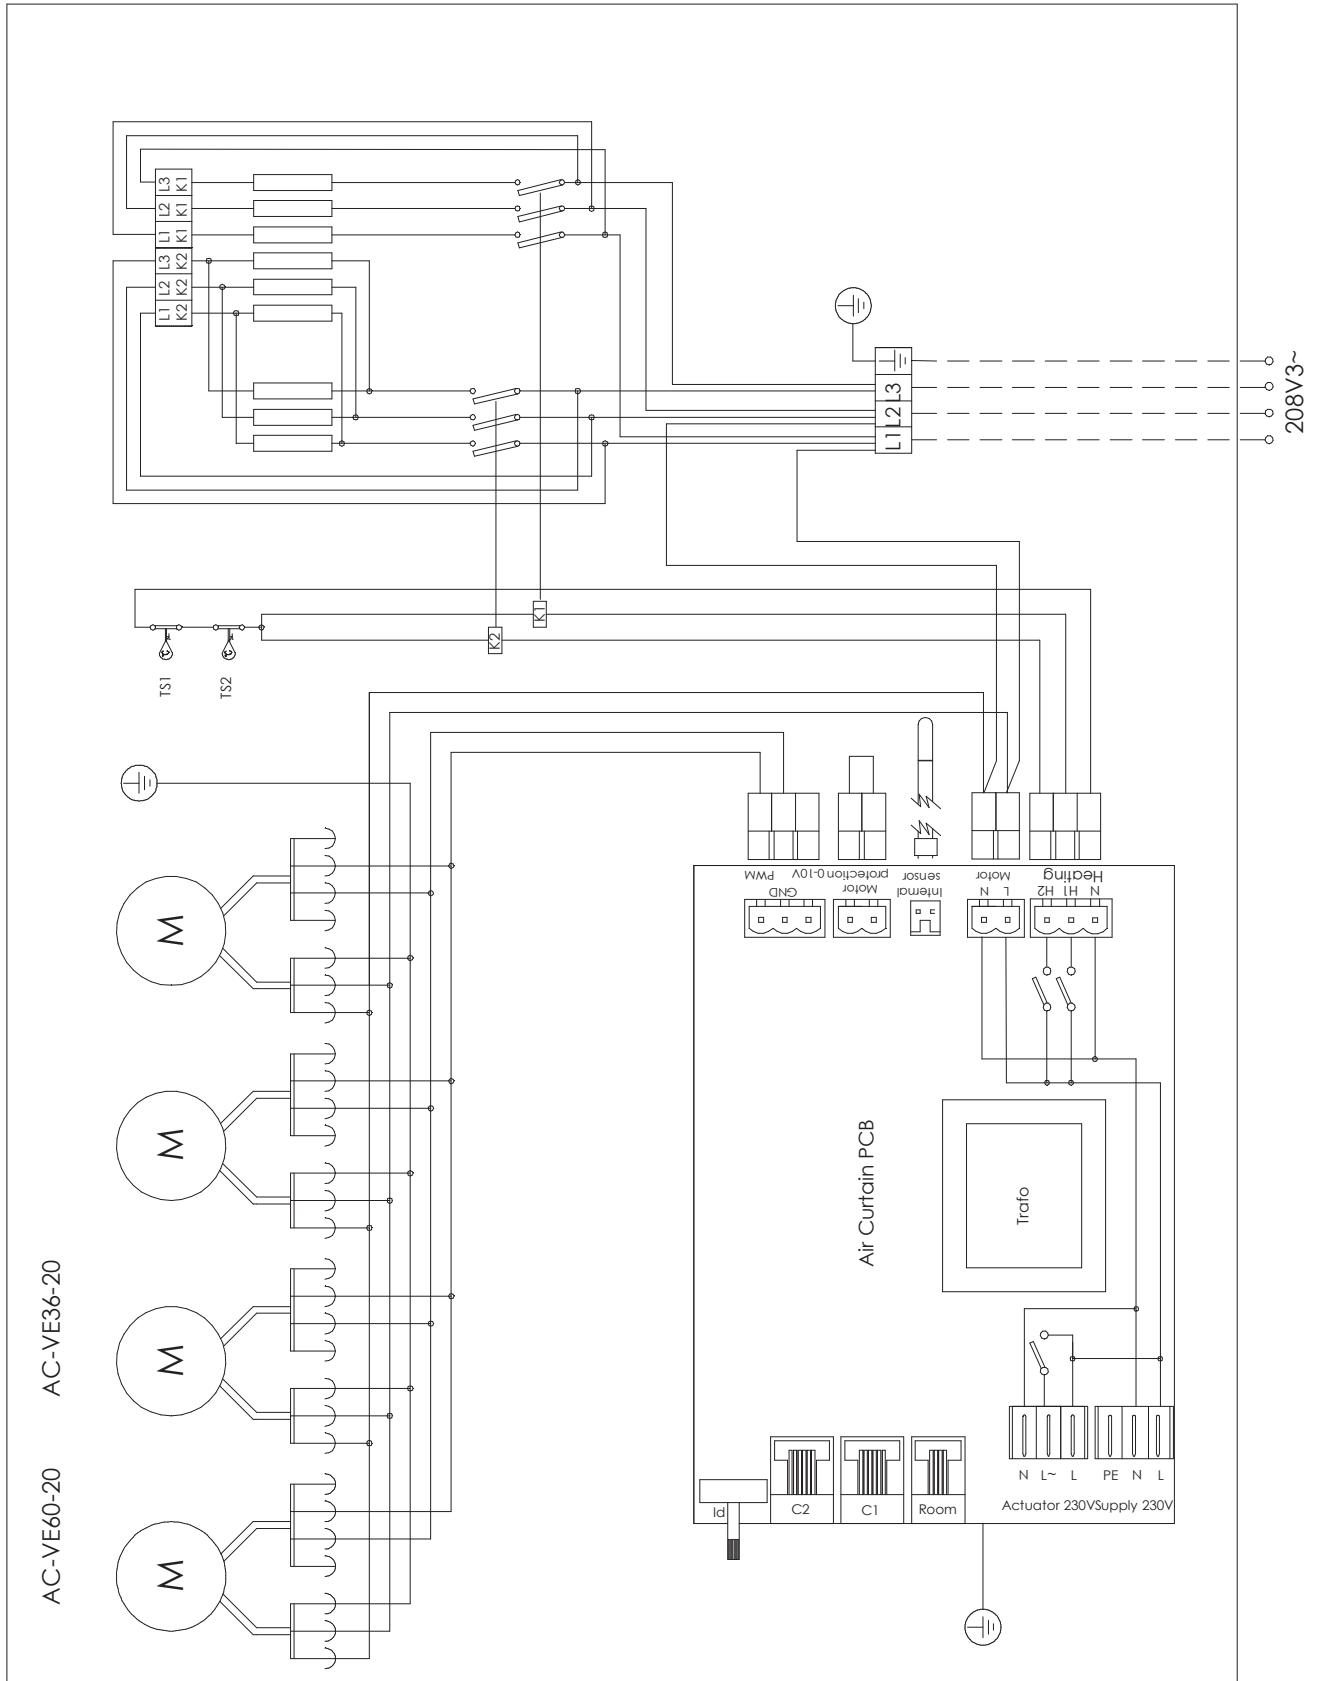


Wiring Diagram - Schwank Select14 Series Air Curtain

- 72" & 96" Electric Heated 208V

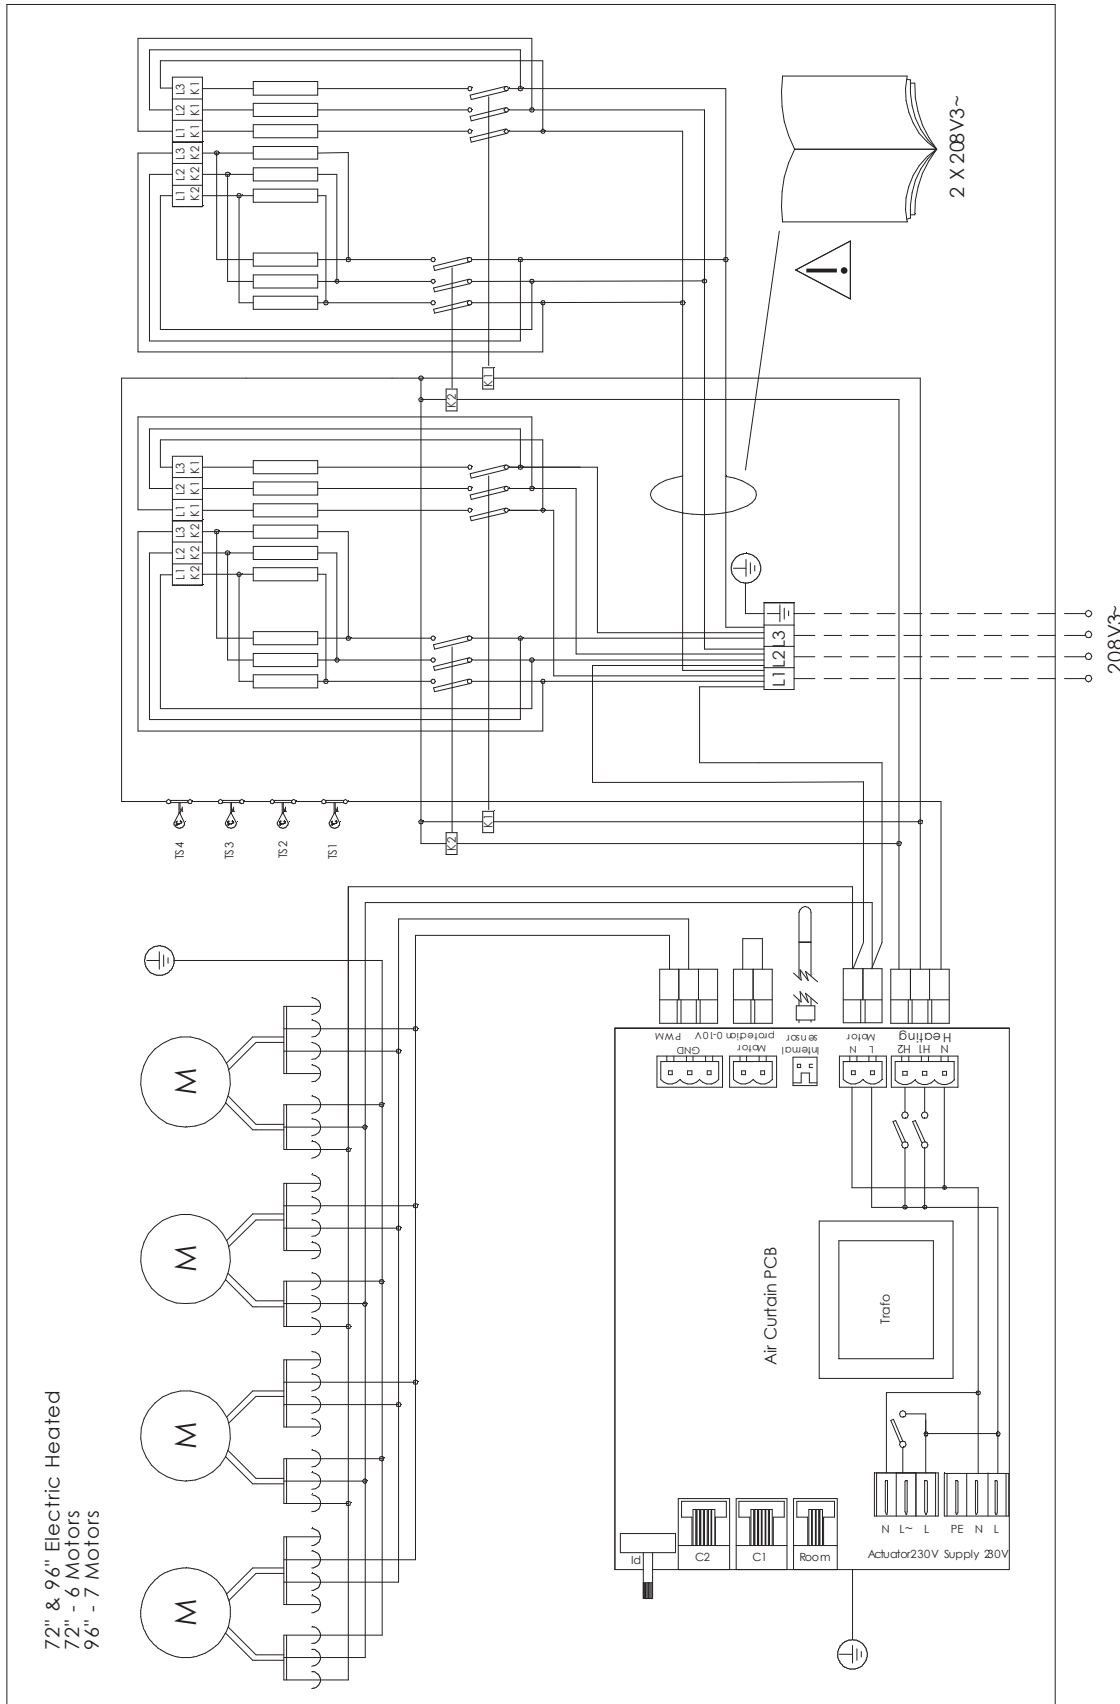


Wiring Diagram - Schwank Select14 Series Air Curtain - 36" & 60" Electric Heated 600V

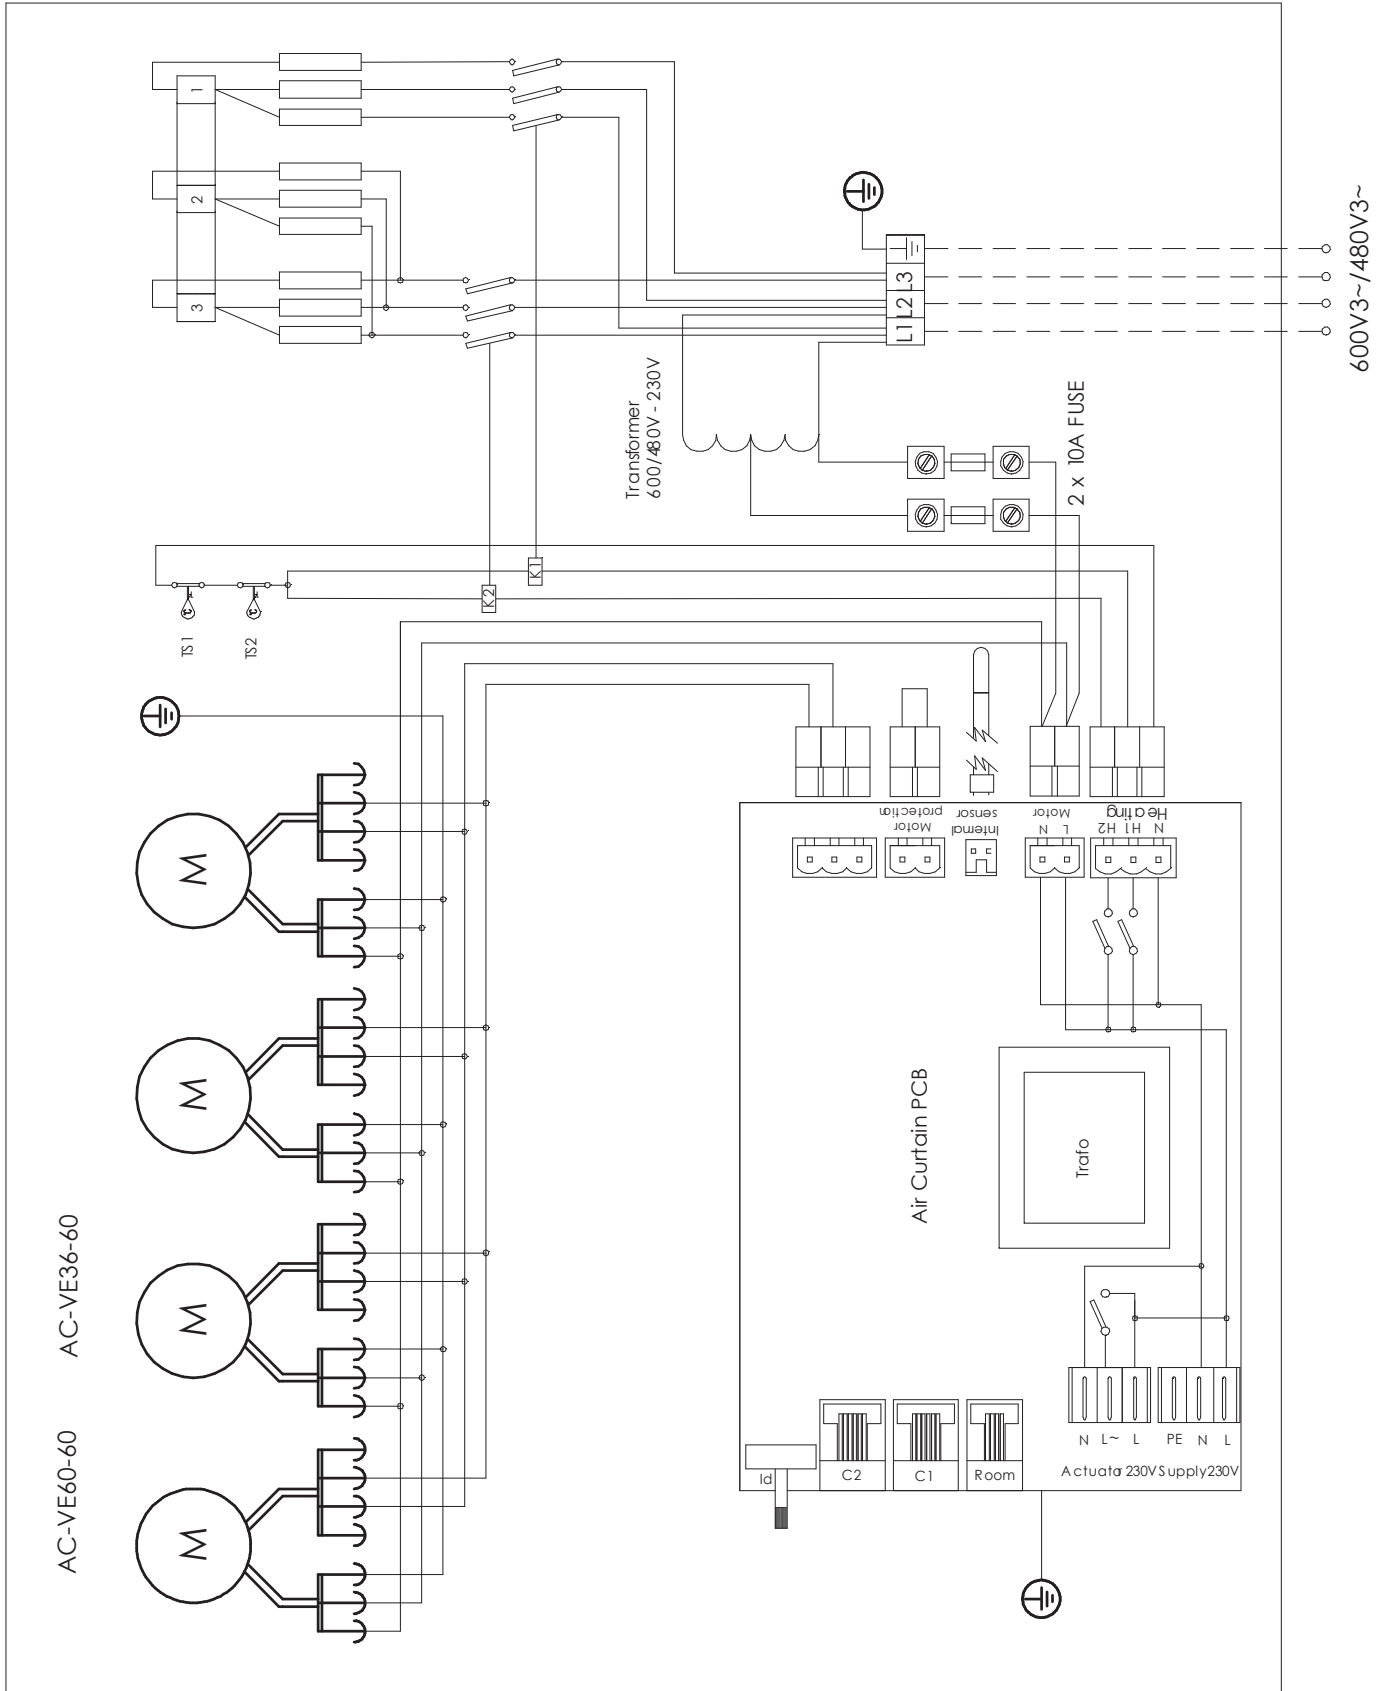


Wiring Diagram - Schwank Select14 Series Air Curtain

- 72" & 96" Electric Heated 480V/600V

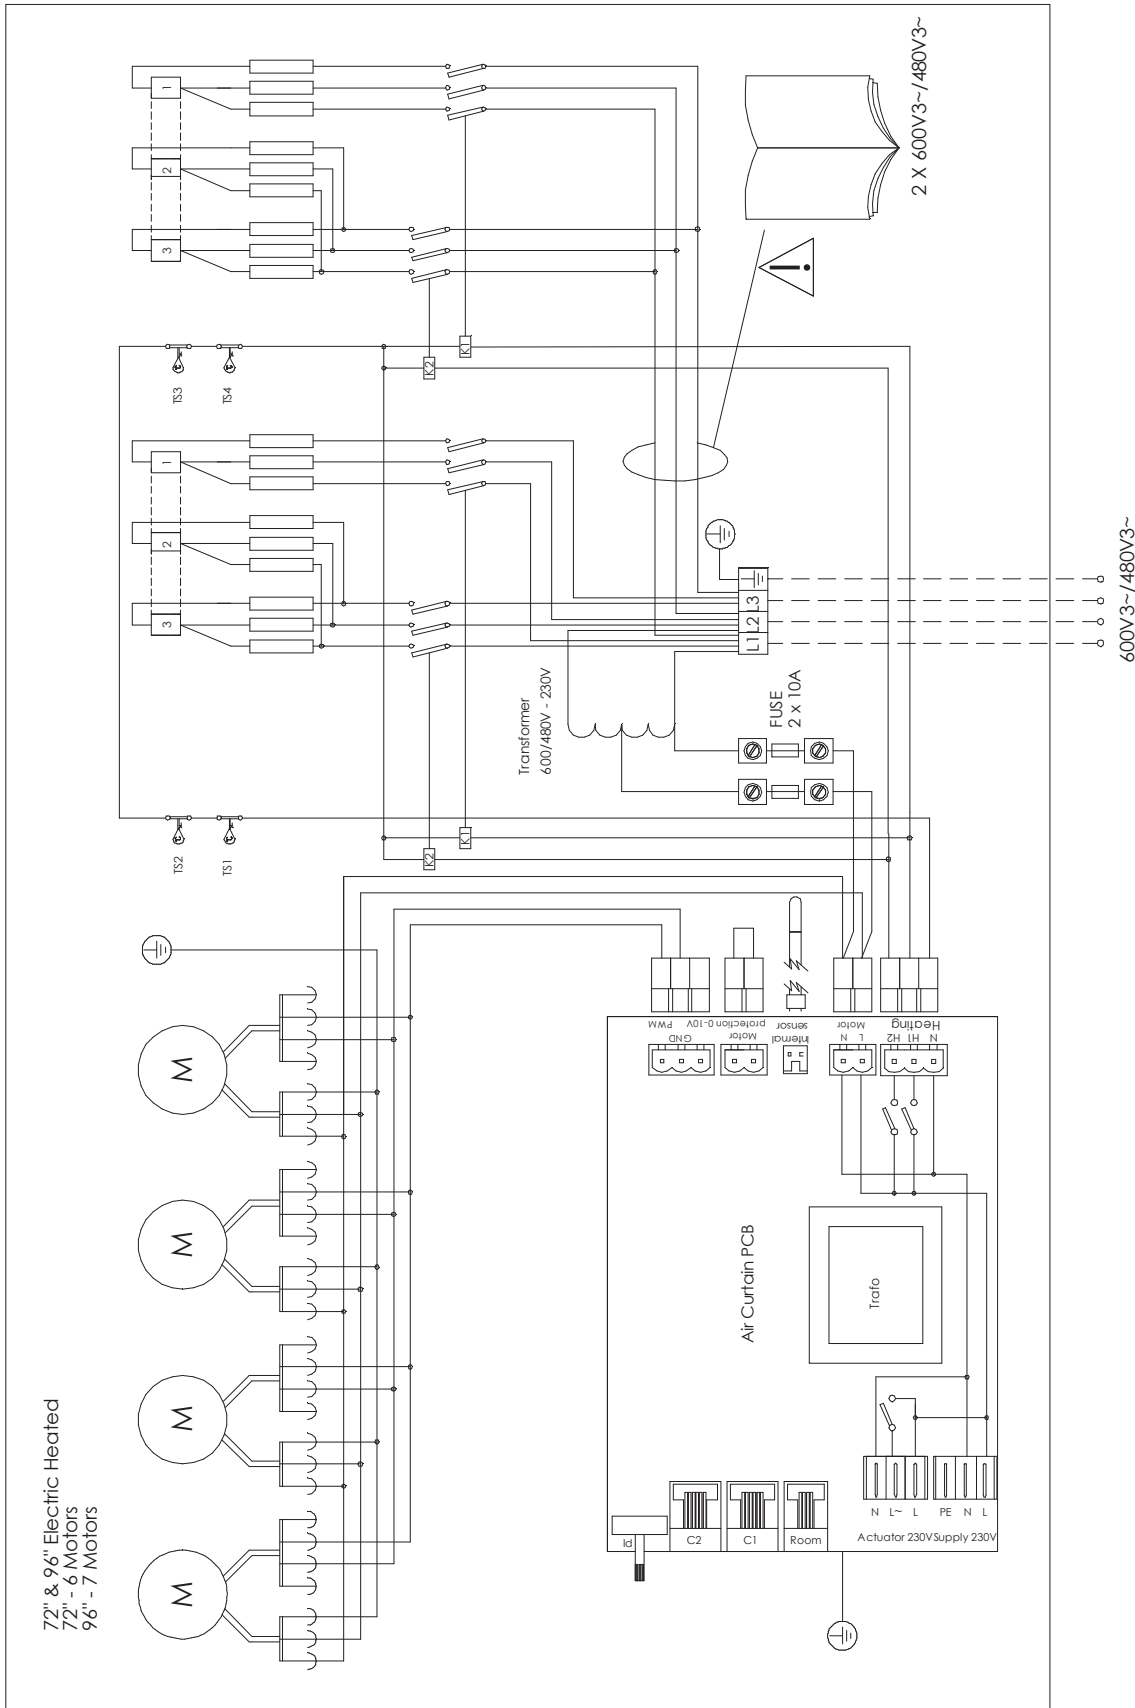

→ Replacement Parts List


Schwank Select14 Series Air Curtain - Ambient

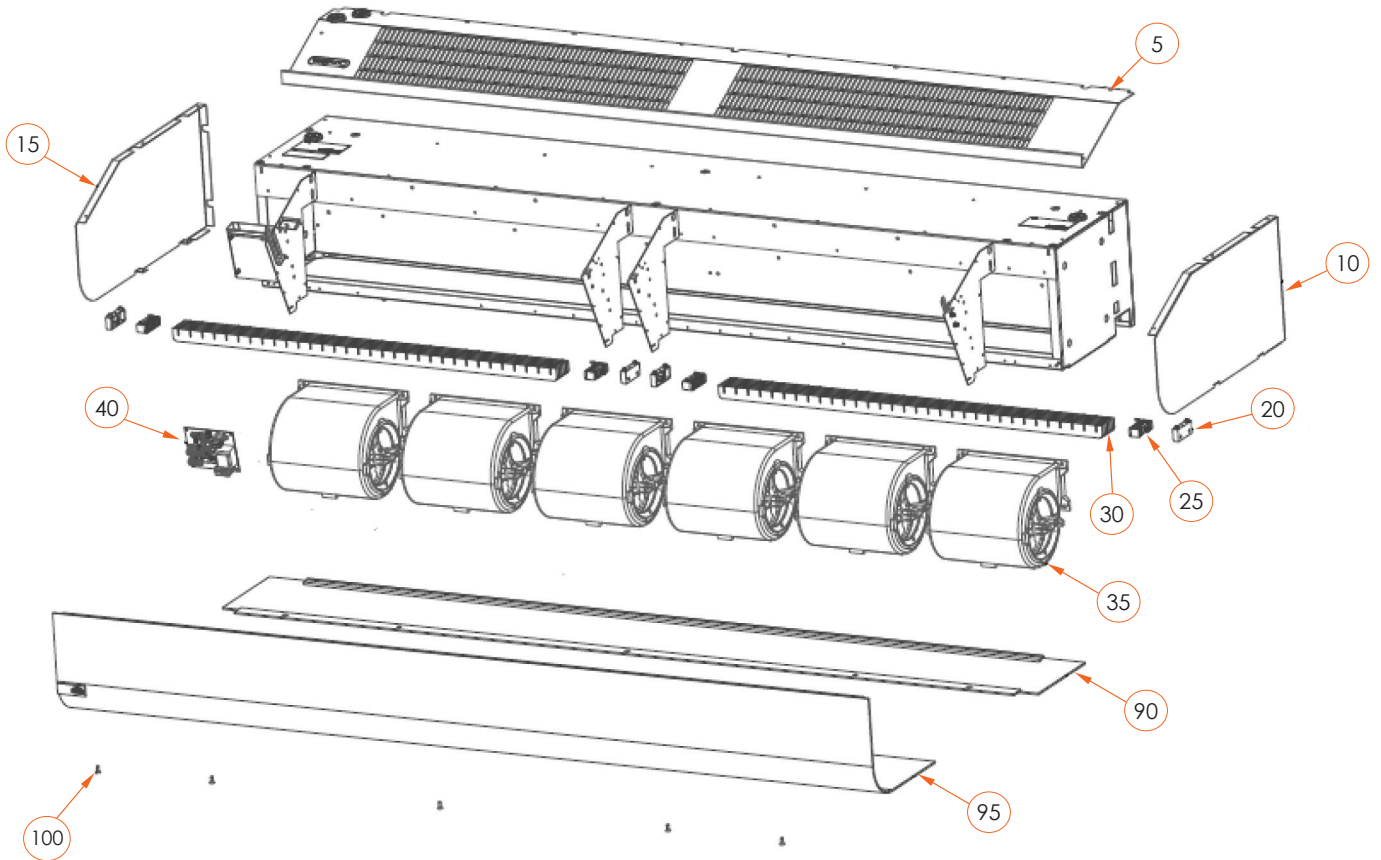

Item	Description	Part #	Model #
100	Select14 Series Air Curtain Screws (Surface)	JC-0601-XX	AC-VA36-23 AC-VA60-23 AC-VA72-23 AC-VA96-23
95	Select14 Series Air Curtain Front Cover 36" (Surface)	JC-0602-10	AC-VA36-23
	Select14 Series Air Curtain Front Cover 60" (Surface)	JC-0602-15	AC-VA60-23
	Select14 Series Air Curtain Front Cover 72" (Surface)	JC-0602-20	AC-VA72-23
	Select14 Series Air Curtain Front Cover 96" (Surface)	JC-0602-25	AC-VA96-23
90	Select14 Series Air Curtain Bottom Cover 36" (Surface)	JC-0603-10	AC-VA36-23
	Select14 Series Air Curtain Bottom Cover 60" (Surface)	JC-0603-15	AC-VA60-23
	Select14 Series Air Curtain Bottom Cover 72" (Surface)	JC-0603-20	AC-VA72-23
	Select14 Series Air Curtain Bottom Cover 96" (Surface)	JC-0603-25	AC-VA96-23
40	Select14 Series Air Curtain PCB	JC-0604-XX	AC-VA36-23 AC-VA60-23 AC-VA72-23 AC-VA96-23
35	Select14 Series Air Curtain EC Motor	JC-0605-XX	AC-VA36-23 AC-VA60-23 AC-VA72-23 AC-VA96-23
30	Select14 Series Air Curtain Discharge Nozzle 36"	JC-0606-10	AC-VA36-23
	Select14 Series Air Curtain Discharge Nozzle 60"	JC-0606-15	AC-VA60-23
	Select14 Series Air Curtain Discharge Nozzle 72"	JC-0606-20	AC-VA72-23
	Select14 Series Air Curtain Discharge Nozzle 96"	JC-0606-25	AC-VA96-23
25	Select14 Series Air Curtain Nozzle Holder	JC-0607-XX	AC-VA36-23 AC-VA60-23 AC-VA72-23 AC-VA96-23
20	Select14 Series Air Curtain Nozzle Holder Bracket	JC-0608-XX	AC-VA36-23 AC-VA60-23 AC-VA72-23 AC-VA96-23
15	Select14 Series Air Curtain Left Cover	JC-0609-XX	AC-VA36-23 AC-VA60-23 AC-VA72-23 AC-VA96-23
10	Select14 Series Air Curtain Right Cover	JC-0610-XX	AC-VA36-23 AC-VA60-23 AC-VA72-23 AC-VA96-23
5	Select14 Series Air Curtain Inlet Grill 36" (Surface)	JC-0611-10	AC-VA36-23
	Select14 Series Air Curtain Inlet Grill 60" (Surface)	JC-0611-15	AC-VA60-23
	Select14 Series Air Curtain Inlet Grill 72" (Surface)	JC-0611-20	AC-VA72-23
	Select14 Series Air Curtain Inlet Grill 96" (Surface)	JC-0611-25	AC-VA96-23

→ Replacement Parts List

Schwank Select14 Series Air Curtain - Electric

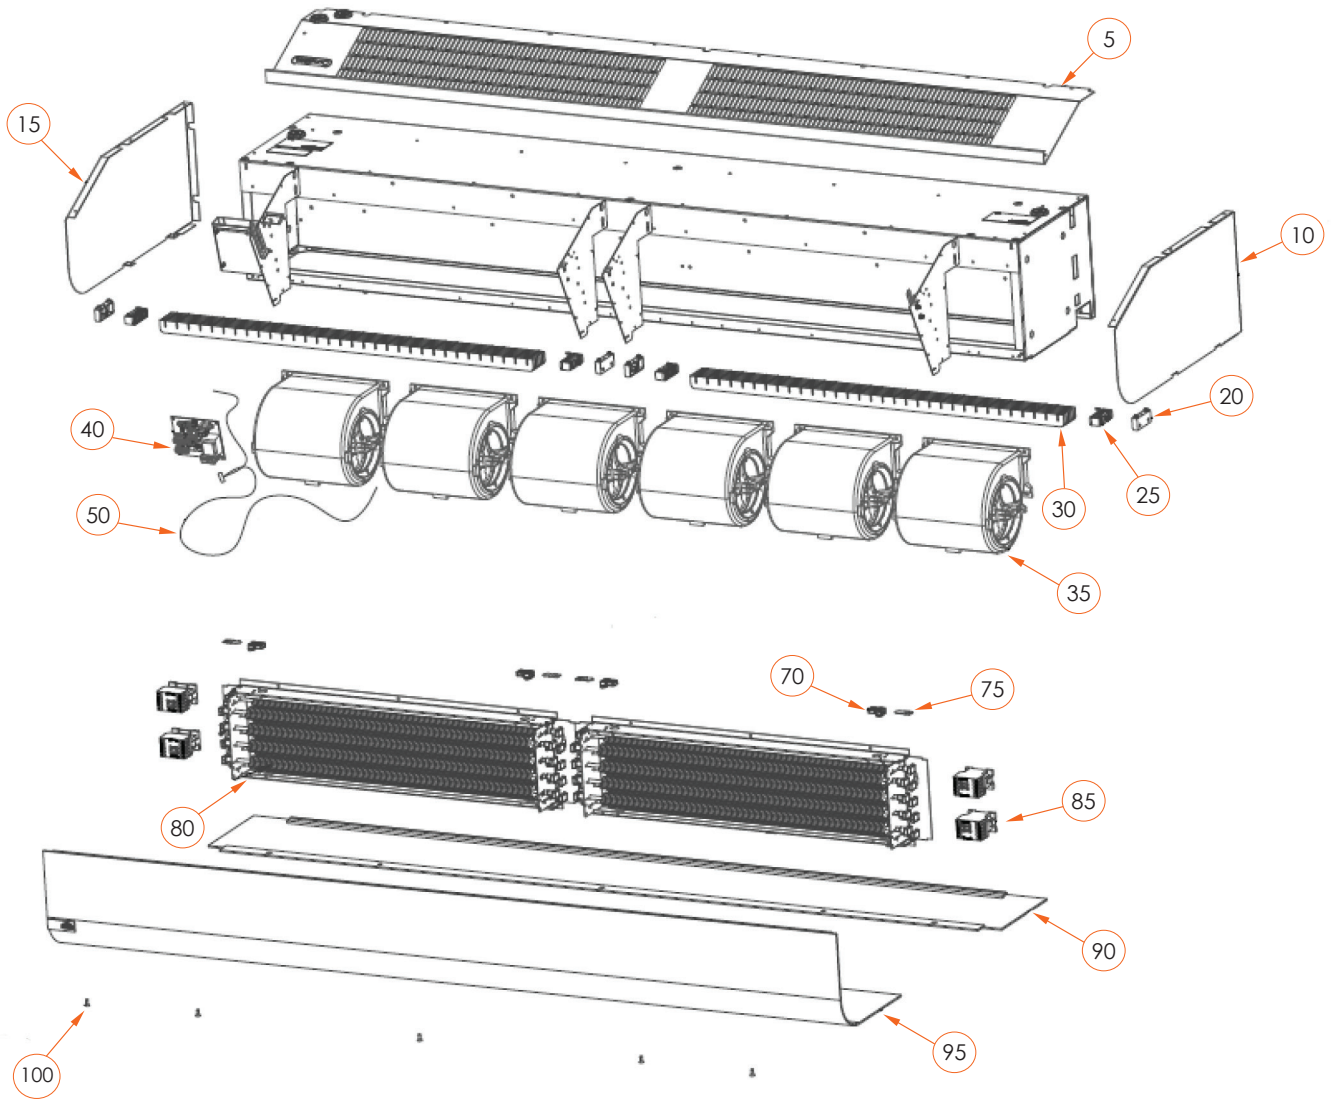


Item	Description	Part #	Model #
100	Select14 Series Air Curtain Screws (Surface)	JC-0601-XX	AC-VE36-20 AC-VE36-48 AC-VE36-60 AC-VE60-20 AC-VE60-48 AC-VE60-60 AC-VE72-20 AC-VE72-48 AC-VE72-60 AC-VE96-48 AC-VE96-60
95	Select14 Series Air Curtain Front Cover 36" (Surface)	JC-0602-10	AC-VE36-20
	Select14 Series Air Curtain Front Cover 36" (Surface)	JC-0602-10	AC-VE36-48
	Select14 Series Air Curtain Front Cover 36" (Surface)	JC-0602-10	AC-VE36-60
	Select14 Series Air Curtain Front Cover 60" (Surface)	JC-0602-15	AC-VE60-20
	Select14 Series Air Curtain Front Cover 60" (Surface)	JC-0602-15	AC-VE60-48
	Select14 Series Air Curtain Front Cover 60" (Surface)	JC-0602-15	AC-VE60-60
	Select14 Series Air Curtain Front Cover 72" (Surface)	JC-0602-20	AC-VE72-20
	Select14 Series Air Curtain Front Cover 72" (Surface)	JC-0602-20	AC-VE72-48
	Select14 Series Air Curtain Front Cover 72" (Surface)	JC-0602-20	AC-VE72-60
	Select14 Series Air Curtain Front Cover 96" (Surface)	JC-0602-25	AC-VE96-48
	Select14 Series Air Curtain Front Cover 96" (Surface)	JC-0602-25	AC-VE96-60
90	Select14 Series Air Curtain Bottom Cover 36" (Surface)	JC-0603-10	AC-VE36-20
	Select14 Series Air Curtain Bottom Cover 36" (Surface)	JC-0603-10	AC-VE36-48
	Select14 Series Air Curtain Bottom Cover 36" (Surface)	JC-0603-10	AC-VE36-60
	Select14 Series Air Curtain Bottom Cover 60" (Surface)	JC-0603-15	AC-VE60-20
	Select14 Series Air Curtain Bottom Cover 60" (Surface)	JC-0603-15	AC-VE60-48
	Select14 Series Air Curtain Bottom Cover 60" (Surface)	JC-0603-15	AC-VE60-60
	Select14 Series Air Curtain Bottom Cover 72" (Surface)	JC-0603-20	AC-VE72-20
	Select14 Series Air Curtain Bottom Cover 72" (Surface)	JC-0603-20	AC-VE72-48
	Select14 Series Air Curtain Bottom Cover 72" (Surface)	JC-0603-20	AC-VE72-60
	Select14 Series Air Curtain Bottom Cover 96" (Surface)	JC-0603-25	AC-VE96-48
	Select14 Series Air Curtain Bottom Cover 96" (Surface)	JC-0603-25	AC-VE96-60
85	Select14 Series Air Curtain Contactor for Electric Heated Models	JC-0615-XX	AC-VE36-20 AC-VE36-48 AC-VE36-60 AC-VE60-20 AC-VE60-48 AC-VE60-60 AC-VE72-20 AC-VE72-48 AC-VE72-60 AC-VE96-48 AC-VE96-60
80	Select14 Series Air Curtain Heating Rod - 208V 36"	JC-0616-10	AC-VE36-20
	Select14 Series Air Curtain Heating Rod - 208V 36"	JC-0616-10	AC-VE36-48
	Select14 Series Air Curtain Heating Rod - 208V 60"	JC-0616-15	AC-VE60-20
	Select14 Series Air Curtain Heating Rod - 208V 60"	JC-0616-15	AC-VE72-20
	Select14 Series Air Curtain Heating Rod - 208V 60"	JC-0616-15	AC-VE60-48
	Select14 Series Air Curtain Heating Rod - 208V 60"	JC-0616-15	AC-VE72-48
	Select14 Series Air Curtain Heating Rod - 600V 36"	JC-0617-10	AC-VE36-60
	Select14 Series Air Curtain Heating Rod - 600V 60"	JC-0617-15	AC-VE60-60
	Select14 Series Air Curtain Heating Rod - 600V 60"	JC-0617-15	AC-VE72-60
75	Select14 Series Air Curtain Thermal Cut Off Electric Heated (Surface)	JC-0618-XX	AC-VE36-20 AC-VE36-48 AC-VE36-60 AC-VE60-20 AC-VE60-48

Item	Description	Part #	Model #
			AC-VE60-60
			AC-VE72-20
			AC-VE72-48
			AC-VE72-60
			AC-VE96-48
			AC-VE96-60
70	Select14 Series Air Curtain Sensor Casing (Surface)	JC-0619-XX	AC-VE36-20
			AC-VE36-48
			AC-VE36-60
			AC-VE60-20
			AC-VE60-48
			AC-VE60-60
			AC-VE72-20
			AC-VE72-48
			AC-VE72-60
			AC-VE96-48
			AC-VE96-60
50	Internal Temp Sensor for Smart Controller	JC-0620-XX	AC-VE36-20
			AC-VE36-48
			AC-VE36-60
			AC-VE60-20
			AC-VE60-48
			AC-VE60-60
			AC-VE72-20
			AC-VE72-48
			AC-VE72-60
			AC-VE96-48
			AC-VE96-60
40	Select14 Series Air Curtain PCB	JC-0604-XX	AC-VE36-20
			AC-VE36-48
			AC-VE36-60
			AC-VE60-20
			AC-VE60-48
			AC-VE60-60
			AC-VE72-20
			AC-VE72-48
			AC-VE72-60
			AC-VE96-48
			AC-VE96-60
35	Select14 Series Air Curtain EC Motor	JC-0605-XX	AC-VE36-20
			AC-VE36-48
			AC-VE36-60
			AC-VE60-20
			AC-VE60-48
			AC-VE60-60
			AC-VE72-20
			AC-VE72-48
			AC-VE72-60
			AC-VE96-48
			AC-VE96-60
30	Select14 Series Air Curtain Discharge Nozzle 36"	JC-0606-10	AC-VE36-20
	Select14 Series Air Curtain Discharge Nozzle 36"	JC-0606-10	AC-VE36-48
	Select14 Series Air Curtain Discharge Nozzle 36"	JC-0606-10	AC-VE36-60
	Select14 Series Air Curtain Discharge Nozzle 72"	JC-0606-15	AC-VE60-20
	Select14 Series Air Curtain Discharge Nozzle 72"	JC-0606-15	AC-VE60-48
	Select14 Series Air Curtain Discharge Nozzle 72"	JC-0606-15	AC-VE60-60
	Select14 Series Air Curtain Discharge Nozzle 60"	JC-0606-20	AC-VE72-20
	Select14 Series Air Curtain Discharge Nozzle 60"	JC-0606-20	AC-VE72-48

Item	Description	Part #	Model #
	Select14 Series Air Curtain Discharge Nozzle 60"	JC-0606-20	AC-VE72-60
	Select14 Series Air Curtain Discharge Nozzle 96"	JC-0606-25	AC-VE96-48
	Select14 Series Air Curtain Discharge Nozzle 96"	JC-0606-25	AC-VE96-60
25	Select14 Series Air Curtain Nozzle Holder	JC-0607-XX	AC-VE36-20 AC-VE36-48 AC-VE36-60 AC-VE60-20 AC-VE60-48 AC-VE60-60 AC-VE72-20 AC-VE72-48 AC-VE72-60 AC-VE96-48 AC-VE96-60
20	Select14 Series Air Curtain Nozzle Holder Bracket	JC-0608-XX	AC-VE36-20 AC-VE36-48 AC-VE36-60 AC-VE60-20 AC-VE60-48 AC-VE60-60 AC-VE72-20 AC-VE72-48 AC-VE72-60 AC-VE96-48 AC-VE96-60
15	Select14 Series Air Curtain Left Cover	JC-0609-XX	AC-VE36-20 AC-VE36-48 AC-VE36-60 AC-VE60-20 AC-VE60-48 AC-VE60-60 AC-VE72-20 AC-VE72-48 AC-VE72-60 AC-VE96-48 AC-VE96-60
10	Select14 Series Air Curtain Right Cover	JC-0610-XX	AC-VE36-20 AC-VE36-48 AC-VE36-60 AC-VE60-20 AC-VE60-48 AC-VE60-60 AC-VE72-20 AC-VE72-48 AC-VE72-60 AC-VE96-48 AC-VE96-60
5	4000 Air Curtain Inlet Grill 36" (Surface)	JC-0611-10	AC-VE36-20
	4000 Air Curtain Inlet Grill 36" (Surface)	JC-0611-10	AC-VE36-48
	4000 Air Curtain Inlet Grill 36" (Surface)	JC-0611-10	AC-VE36-60
	4000 Air Curtain Inlet Grill 60" (Surface)	JC-0611-15	AC-VE60-20
	4000 Air Curtain Inlet Grill 60" (Surface)	JC-0611-15	AC-VE60-48
	4000 Air Curtain Inlet Grill 60" (Surface)	JC-0611-15	AC-VE60-60
	4000 Air Curtain Inlet Grill 72" (Surface)	JC-0611-20	AC-VE72-20
	4000 Air Curtain Inlet Grill 72" (Surface)	JC-0611-20	AC-VE72-48
	4000 Air Curtain Inlet Grill 72" (Surface)	JC-0611-20	AC-VE72-60
	4000 Air Curtain Inlet Grill 96" (Surface)	JC-0611-25	AC-VE96-48
	4000 Air Curtain Inlet Grill 96" (Surface)	JC-0611-25	AC-VE96-60

→ Replacement Parts List

Schwank Select14 Series Air Curtain - Hydronic

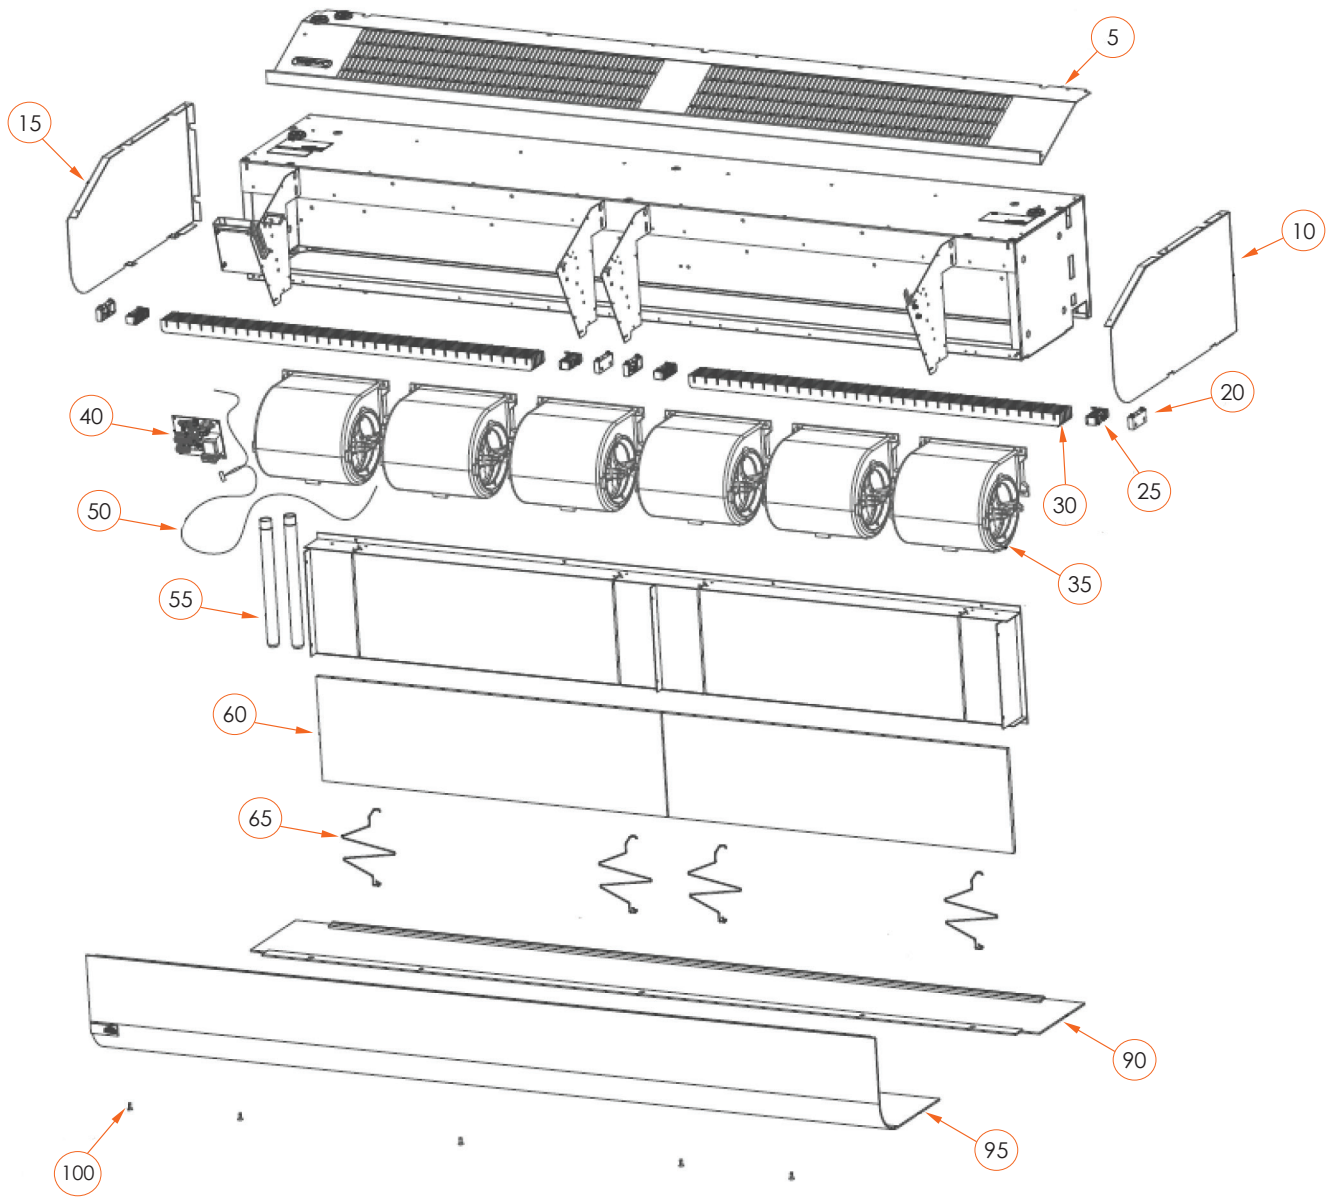

Item	Description	Part #	Model #
100	Select14 Series Air Curtain Screws (Surface)	JC-0601-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
95	Select14 Series Air Curtain Front Cover 36" (Surface)	JC-0602-10	AC-VW36-23
	Select14 Series Air Curtain Front Cover 60" (Surface)	JC-0602-15	AC-VW60-23
	Select14 Series Air Curtain Front Cover 72" (Surface)	JC-0602-20	AC-VW72-23
	Select14 Series Air Curtain Front Cover 96" (Surface)	JC-0602-25	AC-VW96-23
90	Select14 Series Air Curtain Bottom Cover 36" (Surface)	JC-0603-10	AC-VW36-23
	Select14 Series Air Curtain Bottom Cover 60" (Surface)	JC-0603-15	AC-VW60-23
	Select14 Series Air Curtain Bottom Cover 72" (Surface)	JC-0603-20	AC-VW72-23
	Select14 Series Air Curtain Bottom Cover 96" (Surface)	JC-0603-25	AC-VW96-23
65	Select14 Series Air Curtain Filter Holder	JC-0632-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
60	Select14 Series Air Curtain HW Coil Filter 36"	JC-0633-10	AC-VW36-23
	Select14 Series Air Curtain HW Coil Filter 60"	JC-0633-15	AC-VW60-23
	Select14 Series Air Curtain HW Coil Filter 72"	JC-0633-20	AC-VW72-23
	Select14 Series Air Curtain HW Coil Filter 96"	JC-0633-25	AC-VW96-23
55	Select14 Series Air Curtain HW Coil Filter 36" (Surface)	JC-0634-10	AC-VW36-23
	Select14 Series Air Curtain HW Coil Filter 60" (Surface)	JC-0634-15	AC-VW60-23
	Select14 Series Air Curtain HW Coil Filter 72" (Surface)	JC-0634-20	AC-VW72-23
	Select14 Series Air Curtain HW Coil Filter96" (Surface)	JC-0634-25	AC-VW96-23
50	Internal Temp Sensor for Smart Controller	JC-0620-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
40	Select14 Series Air Curtain PCB	JC-0604-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
35	Select14 Series Air Curtain EC Motor	JC-0605-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
30	Select14 Series Air Curtain Discharge Nozzle 36"	JC-0606-10	AC-VW36-23
	Select14 Series Air Curtain Discharge Nozzle 60"	JC-0606-15	AC-VW60-23
	Select14 Series Air Curtain Discharge Nozzle 72"	JC-0606-20	AC-VW72-23
	Select14 Series Air Curtain Discharge Nozzle 96"	JC-0606-25	AC-VW96-23
25	Select14 Series Air Curtain Nozzle Holder	JC-0607-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
20	Select14 Series Air Curtain Nozzle Holder Bracket	JC-0608-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
15	Select14 Series Air Curtain Left Cover	JC-0609-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
10	Select14 Series Air Curtain Right Cover	JC-0610-XX	AC-VW36-23 AC-VW60-23 AC-VW72-23 AC-VW96-23
5	4000 Air Curtain Inlet Grill 36" (Surface)	JC-0611-10	AC-VW36-23
	Select14 Series Air Curtain Inlet Grill 60" (Surface)		AC-VW60-23
	Select14 Series Air Curtain Inlet Grill 72" (Surface)		AC-VW72-23
	Select14 Series Air Curtain Inlet Grill 96" (Surface)		AC-VW96-23

EN

- Read the safety instructions before performing installation and/or maintenance activities on the unit.
- Installation and/or maintenance activities on the unit may only be performed by qualified technical staff.
- The unit shall not be installed and used outdoors or in environments that are aggressive, or potentially explosive. At installation site make sure surrounding environment does not require higher IP classification of the equipment than what is stated on the data label of the unit.
- The unit must be connected in accordance with the applicable local requirements. Make sure that the unit's power supply voltage matches the local mains voltage. The unit's power supply voltage and maximum ratings are displayed on the data label placed on the unit.
- The unit shall be fused according to the table below.
- See also "Safety" on the English pages.

FR

- Veuillez lire les consignes de sécurité avant d'installer l'unité ou d'en effectuer l'entretien.
- L'installation ou l'entretien de l'unité doivent être effectués par un technicien qualifié seulement.
- L'unité ne doit pas être installée et utilisée à l'extérieur ou dans un environnement hostile ou potentiellement explosif. Au site d'installation, veuillez vous assurer que le milieu environnant n'exige pas une classification IP de l'équipement supérieure à ce qui est indiqué sur l'étiquette de données de l'unité.
- L'unité doit être branchée conformément aux exigences locales applicables. Veuillez vous assurer que la tension d'alimentation de l'unité correspond à la tension de secteur locale. La tension d'alimentation de l'unité et les calibres maximums sont indiqués sur l'étiquette de données placée sur l'unité.
- L'unité doit être protégée par un fusible conformément au tableau ci-dessous.
- Voir également la section « Sécurité » dans les pages en français.

EN: Maximum Amperage on L1, L2 or L3 (A) FR: Intensité de courant électrique maximale pour L1, L2 ou L3 (A)	EN: Maximum fuse value (A) FR: Calibre maximum du fusible (A)
≤ 10A	16A
≤ 15A	20A
≤ 20A	25A
≤ 25A	35A
≤ 35A	50A
≤ 50A	63A
≤ 65A	80A
≤ 80A	100A
≤ 102A	125A

Installation and operating instructions

General Instructions

Read these instructions carefully prior to installation and use. Keep this manual for future reference.

The product may only be used as set out in the assembly and operating instructions. The guarantee is only valid should the product be used in the manner intended and in accordance with the instructions.

Application area

Select14 Series Air Curtain is developed to fit all entrances. Recommended installation height up to 14 ft. The air curtain is available without heat, with electrical heating and with water heating. Protection class for units with electrical heating: IP20.

Protection class for units without heating and units with water heating: IP21.

Operation

Air is drawn in at the top/rear of the unit and blown downwards/outwards shielding the door opening and minimizing heat loss. To achieve the optimum air curtain effect the unit must extend the full height/width of the door opening.

The grille for directing the outlet air is adjustable and is normally angled outwards to achieve the best protection against incoming air.

The efficiency of the air curtain depends on the air temperature, the pressure differential across the doorway and any wind load.

NOTE! Negative pressure in the building considerably reduces the efficiency of the air curtain. The ventilation should therefore be balanced.

Mounting

The air curtain range can be adapted for vertical or horizontal installation. The units can also be installed by recessing into suspended ceilings.

Horizontal mounting

The air curtain unit is installed horizontally with the supply air grille facing downwards as close to the door as possible. Minimum distance from outlet to floor for electrically heated units is 70.9 in. For other minimum distances, see fig. 3.

For the protection of wider openings, several units can be mounted next to each other using a joining kit (fig. 9).

A design kit for a neat installation that conceals cables, pipes and mountings is available for both wall and ceiling installations, see accessories pages.

Mounting with wall brackets

1. Remove the plastic covers on the wall brackets. (Fig. 6A)
2. Mount the brackets on the wall according to measures in fig. 6B.
3. Fasten the hammer head screws on the unit in the holes M8. (Fig. 5 and 6C)
4. Lock the nuts so that the hammer head screws are at 0.79 in height. Note the direction of the screw heads. (Fig. 6C)
5. Slide the unit on the consoles. (Fig. 6D)
6. Lock the nuts against the bracket and put the plastic covers on again. (Fig. 6E)

Horizontal mounting on the ceiling

Threaded rods, wire suspension kits and ceiling brackets for ceiling mounting are available as accessories, see fig. 7 and 8 and separate manuals.

Horizontal recessed mounting in false ceilings

Outlet extension used for recessed installation is available as an accessory, see fig. 10 and separate manual.

Vertical mounting JC-0724-XX

Units from 4.9 feet and longer may be used vertically. For vertical mounting, all units must be supplemented with a vertical kit containing everything needed for a practical installation of floor standing units.

The unit can be reversed and placed on either side of the door. Connections and PC Board controller are positioned near floor level when the air curtain is placed to the left of the door and at the top when it is placed to the right (seen from the inside).

The accompanying floor edging is attached to the floor with fasteners appropriate to the surface. Two units can be mounted directly on top of each other, the floor edging is then used as a joining bracket.

The air curtain must be secured to wall or ceiling. A design kit which gives a neater installation that conceals cables and pipes is available as accessory, see accessories pages.

See fig. 11 and separate manual.

Electrical installation

The installation, which should be preceded by an isolator switch with a contact separation of at least 0.12 in, should only be wired by a licensed electrician and in accordance with NEC and the local electrical codes and regulations. The control system is pre-installed in the air curtain with an integrated control card, (see fig. 2).

Controller is supplied pre-programmed with quick-fit connections.

Modular cables are connected to the control board. See manual for controller.

Unit without heating or with water heating
Connected via the built-in controller control board with 6.6 ft cord and plug.

Unit with electrical heating

The electrical connection is made on the top of the unit. See Fig.2. 208V3~/480V3~/600V3~ power supply for heat and control (*1 *2) should be connected to a terminal block in the primary terminal box.



Note! If you want to divide the output between two connection points, the series cabling must first be removed (72" & 96" Electric Heated, 2x480V3~/600V3~).

- *1 480V3~/ 600V3~ Control supply is transformed via internal transformer to 230V~ and routed through 2x 10A fuses in the primary terminal box.
- *2 208V3~ Control supply is connected internally through 2x 10A fuses in the primary terminal box.

The largest cable diameter for the terminal block is 0.025 in². The cable glands used must meet the protection class requirements. In the distribution board it is to be indicated that "the air curtains can be supplied from more than one connection".

See wiring diagrams.

Start-up (VE)

When the unit is used for the first time or after a long period of non-use, smoke or an odour may result from dust or dirt which has collected on the element. This is completely normal and disappears after a short time.

Connecting the water coil (VW)

The installation must be carried out by an authorised installer.

The water coil has copper tubes with aluminium fins and is suitable for connection to a closed water heating system. Steel connection pipe. The heating coil must not be connected to a mains pressure water system or an open water system. Note that the unit shall be preceded by a regulating valve, see SchwankAir valve kit.

The water coil is connected on top of the unit (horizontal mounting) or on the reverse (vertical mounting) via connections Valve (3/4"), external thread. Flexible hoses are available as an accessory, see accessories pages.

The connections to the heating coil must be equipped with shut off valves (included in SchwankAir valve kits) to allow problem free removal.

A vent valve should be connected at a high point in the pipe system. Air valves are not included.

For vertical installation and bottom water connection it is not possible to bleed the coil in the unit. Ensure that the water coil is filled with water and that no air remains, prior to commissioning. See fig. 4.

Our recommended solution is to use a T-connection and shut off valves. Small air bubbles may remain, but will disappear with normal operation.

NOTE: Care must be taken when connecting the pipes. Use a pipe wrench or a similar tool to grip the air curtain connections to prevent straining of the pipes and subsequent water leakage during connection to the water supply pipe-work.

Adjustment of the air curtain and airflow

The direction and speed of the airflow should be adjusted considering the load on the opening. Pressure forces affect the airstream and force it inwards towards the premises (when the premises are heated and the outdoor air is cold).

The airstream should, therefore, be directed outwards to withstand the load. Generally speaking, the higher the load, the greater the angle required.

Basic setting fan speed

The fan speed when the door is open is set using the control. Note that the airflow direction and the fan speed may need fine adjustment depending on the loading of the door.

Filter (VW)

The water coil is protected against dirt and blockage by an air filter which covers the coil face. In environments where the filter needs cleaning often, it is advisable to use an external intake filter (see accessories pages), which provides an easier maintenance, since the unit does not need to be opened.

Service, repairs and maintenance

For all service, repair and maintenance first carry out the following:

1. Disconnect the power supply.
2. The front is locked in the open position with the front hatch hook, see fig 1A or removed completely, see fig. 1B. The service hatch is removed by loosening the screws.
3. After service, repairs and maintenance fasten the service hatch and the front.

Maintenance

Unit with water heating

The appliance filter should be cleaned regularly to ensure the air curtain effect and heat emission from the device. How often depends on local circumstances. A clogged filter is not a risk, but the appliance function can fail.

1. Disconnect the power supply.
2. Remove the screws and raise the front panel. The front is locked in open position with the front hatch hook. See Fig. 1A.
3. Remove the filter and vacuum clean or wash it. If the filter is clogged or damaged, it may need to be changed.

All units

Since fan motors and other components are maintenance-free, no maintenance other than cleaning is necessary. The level of cleaning can vary depending on local conditions.

Undertake cleaning at least twice a year. Inlet and exhaust grilles, impeller and elements can be vacuum cleaned or wiped using a damp cloth. Use a brush when vacuuming to prevent damaging sensitive parts. Avoid the use of strong alkaline or acidic cleaning agents.

Overheating

The air curtain unit with electrical heating is equipped with an overheat protection. If it is deployed due to overheating, reset as follows:

1. Disconnect the electricity supply with the fully isolated switch.
2. Allow the electrical coil to cool.
3. Determine the cause of overheating and rectify the fault.
4. Reconnect the air curtain.

All motors are equipped with an integral thermal safety cut-out. This will operate, stopping the air curtain should the motor temperature rise too high. The cut-out will automatically reset when the motor temperature has returned to within the motor's operating limits.

Temperature control

Temperature control of the controller maintains the exhaust temperature. If the temperature should exceed the preset value anyway the overheating alarm goes off. For more information see the manual for the controller.

Fan replacement

1. Determine which of the fans is not functioning.
2. Disconnect the cables from the relevant fan.
3. Remove the screws securing the fan and lift the fan out.
4. Install the new fan as above in reverse order.

Replacing heating elements (VE)

1. Mark and disconnect the cables to the electric coil package.
2. Remove the mounting screws securing the electric coil package in the unit and lift it out.
3. Replace faulty electric coil.
4. Install the electric coil package in reverse order to the above.

Replacing the water coil (VW)

1. Shut off the water supply to the unit.
2. Disconnect the connections to the water coil.
3. Remove the mounting screws securing the coil in the unit and lift the coil out.
4. Install the new coil in reverse order to the above.

Troubleshooting

If the fans are not working or do not blow properly, check the following:

- That the intake grille/filter is not dirty.
- Functions and settings of the control system, see manual for the controller.

If there is no heat, check the following:

- Functions and settings of the controller control system, see manual for the controller.

For units with electrical heating, also check the following:

- Power supply to electric heater coil; check fuses and circuit-breaker (if any).
- That the overheat protection has not been deployed.

For units with a water coil, also check the following:

- That the water coil is air free.
- That there is sufficient water flow and pressure.
- That incoming water is heated adequately.

If the fault cannot be rectified, please contact a qualified service technician.

Residual current circuit breaker (VE)

When the installation is protected by means of a residual current circuit breaker, which trips when the appliance is connected, this may be due to moisture in the heating element. When an appliance containing a heater element has not been used for a long period or stored in a damp environment, moisture can enter the element. This should not be seen as a fault, but is simply rectified by connecting the appliance to the main supply via a socket without a safety cut-out so that the moisture can be eliminated from the element. The drying time can vary from a few hours to a few days. As a preventive measure, the unit should occasionally be run for a short time when it is not being used for extended periods of time.

Packaging

Packaging materials are chosen with consideration to the environment and are therefore recyclable.

Handling of product at end of working life

This product may contain substances necessary for the functionality of the product but potentially dangerous for the environment. The product should not be disposed of mixed with general household waste but delivered to a designated collection point for environmental recycling. Please contact the local authority for further details of your nearest designated collection point.

Safety

- For all installations of electrically heated products a residual current circuit breaker 300 mA for fire protection should be used.
- Keep the areas around the air intake and exhaust grilles free from possible obstructions!
- The unit must not be fully or partially covered as overheating can result in a fire risk!
- Lifting equipment must be used to lift the unit.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Consignes de montage et mode d'emploi

Généralités

Lisez attentivement les présentes consignes avant d'installer et d'utiliser l'appareil. Conservez ce manuel afin de pouvoir le consulter ultérieurement.

Le produit doit être utilisé uniquement en conformité avec les consignes de montage et le mode d'emploi. La garantie n'est valable que si l'utilisation du produit est conforme aux indications et consignes.

Application

Est développé pour s'adapter à toutes les entrées. Hauteur d'installation préconisée jusqu'à: 13.1 pieds. Le rideau d'air est disponible sans chauffage, avec chauffage électrique et avec chauffage à eau.

Indice de protection pour les appareils avec chauffage électrique : IP20.

Indice de protection pour les appareils sans chauffage et appareils avec chauffage à eau : IP21.

Fonctionnement

L'air, aspiré par le haut/l'arrière de l'appareil, est soufflé vers le bas/l'extérieur pour former un écran devant l'ouverture de porte et réduire ainsi les déperditions. Pour un effet optimal, la longueur de l'appareil doit être égale à la largeur/hauteur de l'ouverture de la porte.

La grille de soufflage d'extraction d'air est orientable ; elle est en principe dirigée vers l'extérieur de manière à optimiser la barrière créée contre l'air d'extérieur.

L'efficacité du rideau d'air dépend de la température de l'air, des variations de pression dans l'ouverture de porte et, le cas échéant, de la pression du vent.

REMARQUE : une pression négative à l'intérieur du local réduit considérablement l'efficacité du rideau d'air. La ventilation doit donc être équilibrée.

Montage

Les rideaux d'air sont prévus pour une installation verticale ou horizontale. Les appareils peuvent également être encastrés en faux plafonds démontable.

Montage horizontal

Le rideau d'air est monté horizontalement, avec la grille de sortie vers le bas aussi près que possible de la porte. La distance minimale entre la sortie et le sol est de 1 70.9 in. Voir la fig. 3 pour les autres distances minimales.

Pour des ouvertures plus larges, plusieurs appareils peuvent être montés côte à côte en utilisant un kit de connexion (fig. 9).

Le kit de conception pour une installation esthétique qui masque les câbles, les tuyaux et les montages existe aussi bien pour les installations murales que les installations suspendues. Voir la page des accessoires.

Installation avec des consoles pour montage mural

1. Retirer les couvercles en plastique des consoles. (Fig. 6A)
2. Monter les consoles sur le mur en respectant les cotes des fig. 6B.
3. Serrer les vis de suspension sur l'appareil dans les trous M8. (Fig. 5 et 6C)
4. Bloquer les écrous de manière à ce que les vis de suspension soient à une hauteur de 0.79 in. Noter la direction des vis de suspension. (Fig. 6C)
5. Accrocher l'appareil sur les consoles. (Fig. 6D)
6. Bloquer les écrous contre les fixations et remettre les couvercles en plastique. (Fig. 6E)

Montage horizontal au plafond

Des tiges filetées, des kits de fil de suspension et des consoles de fixation au plafond sont disponibles en tant qu'accessoires, voir les fig. 7 et 8, ainsi que les autres manuels.

Montage encastré horizontale dans faux plafonds

L'extension de sortie servant à l'installation encastrée est disponible en tant qu'accessoire. Voir la fig. 10 et le manuel connexe.

Montage vertical JC-0724-XX

Les appareils mesurant 4.9 pieds et plus peuvent être utilisés à la verticale. Pour pouvoir être montés verticalement, tous les appareils doivent être équipés d'un kit de montage vertical comprenant tous les éléments nécessaires à une installation pratique des appareils de sol.

L'appareil peut être inversé et positionné sur l'un ou l'autre côté de la porte. Les connexions et la carte électronique SRe sont positionnés près du niveau du sol lorsque le rideau d'air est installé à gauche de la porte, et au-dessus lorsqu'il est installé à sa droite (vue de l'intérieur). La bordure de montage au sol qui l'accompagne est maintenue au sol par des écrous adaptés à la surface.

Deux appareils peuvent être installés directement l'un au-dessus de l'autre ; la bordure de montage au sol sert alors de fixation de connexion.

Le rideau d'air doit être bien fixé au mur ou au plafond. Un kit de conception qui permet une installation plus propre, en masquant les câbles et tubes, est disponible en tant qu'accessoires.

Voir la page des accessoires. Voir la fig. 11 et le manuel connexe.

Installation électrique

L'installation, qui doit être précédée d'un interrupteur omnipolaire/de coupure avec une séparation de contact de 0.12 in au moins, doit être réalisée par un installateur qualifié, conformément à la réglementation IEE sur les branchements électriques en vigueur dans son édition la plus récente. Le système de régulation est préinstallé dans le rideau d'air à l'aide d'une carte de régulation intégrée (voir fig. 2). Est préprogrammé avec des raccords rapides.

Les câbles modulaires sont raccordés au circuit imprimé. Voir le manuel de la référence.

Appareil sans chauffage ou avec chauffage à eau chaude

Connecté via le circuit imprimé avec cordon de 6.6 pieds et fiche.

Appareil avec chauffage électrique

Le raccordement électrique s'effectue sur la partie supérieure de l'appareil. Voir Fig.2. 208V3~/480V3~/600V3~ commande et puissance (*1 *2) doivent être connectées aux borniers dans la boîte de raccordement principale.



Remarque : si vous souhaitez diviser la puissance entre les deux points de raccordement, vous devez d'abord retirer le câblage de série (AC-VA72-23, 2x480V3~/600V3~).

- *1 480V3~/600V3~ L'alimentation commande est transformée au 230V~ par le transformateur interne et cheminée via 2x 10A fusibles dans la boîte de raccordement principale.
- *2 208V3~ L'alimentation commande est connectée à l'intérieur via 2x 10A fusibles dans la boîte de raccordement principale.

Le diamètre maximum de câble au bornier est de 0.025 in². Les presse-étoupe utilisés doivent être conformes aux indices de protection concernés. Le panneau électrique doit comporter la mention « Les rideaux d'air peuvent être alimentés depuis plusieurs connexions ».

Voir les schémas de raccordement.

Démarrage (VE)

Lorsque l'unité sert pour la première fois, ou suite à une longue période d'inactivité, de la fumée ou une odeur résultant de la poussière ou saleté éventuellement accumulée à l'intérieur de l'appareil peut se dégager. Ce phénomène est tout à fait normal et disparaît rapidement.

Raccordement de la batterie à eau chaude (VW).

L'installation doit être effectuée par un installateur agréé.

La batterie à eau chaude est constituée de tubes de cuivre dotés d'ailettes en aluminium; elle est conçue pour être raccordée à un circuit fermé d'eau chaude. Gaine en acier.

La batterie à eau chaude ne doit pas être branchée sur un circuit hydraulique à pression standard, ni sur un circuit ouvert.

Noter que l'appareil doit être précédé d'une vanne de régulation ; voir le kit de vannes SchwankAir.

La batterie à eau chaude est connectée à la partie supérieure de l'appareil (montage horizontal) ou à la partie inférieure (vertical) via des connexions (3/4 po), avec filetage externe. Tuyaux flexibles à commander en tant qu'accessoire ; voir les pages d'accessoires. Les raccordements au circuit d'eau chaude doivent être dotés de vannes d'arrêt (incluses dans les kits vannes SchwankAir) permettant une dépose aisée.

Un purgeur d'air doit être raccordé à un point haut du circuit hydraulique. Les purgeurs d'air ne sont pas inclus.

Il n'est pas possible de purger la batterie dans l'appareil en cas d'installation verticale et de raccord hydraulique par le bas. S'assurer que la batterie à eau chaude est remplie et qu'elle ne contient plus d'air avant sa mise en service. Voir fig. 4

Nous recommandons l'utilisation d'un raccord en T et de vannes d'arrêt. Les petites bulles d'air qui pourraient être présentes disparaîtront lors du fonctionnement.

REMARQUE : faire attention lors de la connexion des tuyaux. Pour un raccordement sur une canalisation, utiliser une clé ou un outil similaire pour maintenir la connexion entre le rideau d'air et les tuyaux afin d'éviter de tendre ces derniers et donc ne pas créer de fuite.

Réglage de l'appareil et du débit d'air

La direction et la vitesse du jet d'air doivent être réglés en tenant compte de la charge sur l'ouverture. Les pressions d'air présentes au niveau de l'entrée influent sur le débit d'air, le repoussant vers l'intérieur (lorsque le local est chauffé et que l'air extérieur est froid).

Le débit d'air doit par conséquent être orienté vers l'extérieur de manière à contrebalancer la charge. D'une manière générale, plus la charge est élevée, plus l'angle doit être important.

Réglage initial de la vitesse de ventilation

La vitesse de ventilation lorsque la porte s'ouvre est réglée à l'aide de la commande. Garder à l'esprit le fait qu'un réglage fin de l'orientation et de la vitesse du débit d'air peut s'imposer en fonction de la charge.

Dans des environnements dans lesquels le filtre a besoin d'être fréquemment nettoyé, il est conseillé d'utiliser un filtre d'entrée externe (voir la page des accessoires), qui facilite la maintenance puisque le nettoyage peut se faire sans devoir ouvrir l'appareil.

Filtre (VW)

La batterie à eau chaude est protégée contre la poussière et l'obstruction par un filtre à air qui recouvre sa surface. Dans des environnements dans lesquels le filtre a besoin d'être fréquemment nettoyé, il est conseillé d'utiliser un filtre d'entrée externe (voir la page des accessoires), qui facilite la maintenance puisque le nettoyage peut se faire sans devoir ouvrir l'appareil.

Entretien, réparations et maintenance

Opérations initiales pour toute intervention d'entretien, de réparation et de maintenance :

1. Déconnecter l'alimentation électrique.
2. La face est bloquée en position ouverte à l'aide du crochet de la trappe avant, voir fig. 1A, ou complètement retirée, voir fig. 1B. La trappe d'entretien est retirée en desserrant les vis.
3. Refermer la trappe d'entretien et la face après les travaux d'entretien, de réparation et de maintenance.

Entretien

Appareil avec chauffage à eau chaude

Le filtre doit être nettoyé régulièrement pour garantir l'effet rideau d'air et l'émission de chaleur. La fréquence de ce nettoyage dépend de l'environnement immédiat de l'appareil. Un filtre obstrué ne constitue pas un risque, mais peut entraîner la panne de l'appareil.

1. Déconnecter l'alimentation électrique.
2. Desserrer les vis et soulever la face avant. La face est bloquée en position ouverte à l'aide du crochet de la trappe avant. Voir Fig. 1A.
3. Retirer le filtre et le nettoyer à l'aspirateur ou le laver. Si le filtre est obstrué ou endommagé, il peut être nécessaire de le changer.

Tous les appareils

Les moteurs du ventilateur et les autres organes de l'appareil ne nécessitant aucune maintenance, seul un nettoyage régulier est nécessaire. La fréquence de nettoyage dépend des conditions locales. Un nettoyage s'impose cependant au moins deux fois par an. Les grilles d'admission et de diffusion, la turbine et les autres éléments peuvent être nettoyés à l'aspirateur, ou essuyés à l'aide d'un chiffon humide. Lors du passage de l'aspirateur, utiliser une brosse afin de ne pas endommager les pièces fragiles. Ne pas utiliser de produits de nettoyage très alcalins ou acides.

Surchauffe

Le modèle à chauffage électrique est doté d'un dispositif anti-surchauffe. Si ce dispositif se déclenche, il convient de le réinitialiser de la manière suivante :

1. Débrancher l'électricité au niveau de l'interrupteur entièrement isolé.
2. Attendre le refroidissement de la résistance.
3. Déterminer la cause de la surchauffe et y remédier.
4. Reconnecter le rideau d'air.

Tous les moteurs sont équipés d'une sécurité thermique intégrale. Elle fonctionne en arrêtant le fonctionnement du rideau d'air si la température du moteur est trop élevée. Le disjoncteur différentiel se réinitialise automatiquement lorsque la température revient dans la plage admissible.

Commande de la température

La régulation de température SIRE maintient la température d'échappement. Si, malgré tout, la température dépasse la valeur prédéfinie, l'alarme de surchauffe se déclenche. Pour plus d'informations, consultez la notice de SIRE.

Remplacement d'un ventilateur

1. Déterminer quel ventilateur ne fonctionne pas.
2. Débrancher ses câbles d'alimentation.
3. Retirer ses vis de fixation et ôter le ventilateur.
4. Mettre en place le nouveau ventilateur en suivant les étapes ci-dessus dans l'ordre inverse.

Remplacer une résistance (VE)

1. Repérer et débrancher les câbles de la résistance.
2. Retirer les vis de fixation de la résistance et la déposer.
3. Remplacer la résistance défectueuse.
4. Mettre en place la nouvelle résistance en suivant les étapes ci-dessus dans l'ordre inverse.

Remplacement de la batterie à eau chaude.

1. Couper l'alimentation d'eau de l'appareil.
2. Déconnecter les canalisations de la batterie à eau chaude.
3. Retirer les vis de fixation de la batterie et la déposer.
4. Mettre en place la nouvelle batterie en inversant les étapes ci-dessus.

Dépannage

Si les ventilateurs ne fonctionnent pas ou ne soufflent pas suffisamment, contrôler les points suivants :

- Propreté de la grille/du filtre de prise d'air.
- Vérifier les fonctions et réglages du système de commande SIRE, voir le manuel SIRE.

Si le chauffage ne fonctionne pas, contrôler les points suivants :

- Vérifier les fonctions et réglages du système de commande SIRE, voir le manuel SIRE.

Pour les appareils à chauffage électrique, contrôler également les points suivants :

- Alimentation électrique de la résistance : contrôler fusibles et disjoncteur (le cas échéant).
- Activation éventuelle de la protection anti-surchauffe.

Pour les appareils à batterie à eau chaude, contrôler également les points suivants :

- Purge de la batterie à eau chaude.
- Débit d'eau suffisant.
- Eau entrante suffisamment chaude.

Si le problème persiste, faire appel à un technicien d'entretien qualifié.

Disjoncteur à courant résiduel (VE)

Si l'installation est protégée par un disjoncteur à courant résiduel, et que ce dernier se déclenche à la mise sous tension de l'appareil, le problème peut être lié à la présence d'humidité dans l'élément de chauffe. En cas de stockage prolongé dans un lieu humide, l'élément de chauffe de l'appareil peut avoir pris l'humidité. Ce n'est pas une panne et il est facile d'y remédier en branchant provisoirement l'appareil sur le secteur via une prise sans disjoncteur différentiel, de sorte à sécher l'élément de chauffe. Le séchage peut prendre de quelques heures à quelques jours. À titre préventif, il est conseillé de faire fonctionner l'appareil pour une courte durée, de temps à autre, lorsqu'il n'est pas en service pendant une période prolongée.

Emballage

Les matériaux d'emballage sélectionnés sont recyclables, dans un souci de respect de l'environnement.

Gestion du produit en fin de vie

Ce produit peut contenir des substances qui sont nécessaires à son fonctionnement, mais peuvent constituer un danger pour l'environnement. Il ne doit donc pas être jeté avec les déchets ménagers, mais déposé dans un point de collecte agréé en vue d'être recyclé. Veuillez contacter les autorités locales pour en savoir plus sur le point de collecte agréé le plus proche de chez vous.

Sécurité

- *Un disjoncteur à courant résiduel de 300 mA doit être utilisé contre les risques d'incendie dans les installations de produits avec chauffage électrique.*
- *Veiller à ce que les zones à proximité des grilles de prise et de sortie d'air soient libres de tout objet susceptible de provoquer des obstructions.*
- *L'appareil ne doit en aucun cas être couvert : toute surchauffe est susceptible de provoquer un incendie.*
- *L'appareil doit être soulevé à l'aide d'équipement de levage.*
- *Les enfants de plus de 8 ans peuvent utiliser cet appareil, tout comme les personnes aux capacités physiques, mentales ou sensorielles réduites, ou manquant d'expérience ou de connaissances, si une personne les a conseillés ou formés à son utilisation et aux dangers possibles. Les enfants ne doivent pas jouer avec cet appareil. Le nettoyage et l'entretien de l'appareil ne doivent pas être confiés aux enfants sans surveillance.*
- *Tenez les enfants âgés de moins de 3 ans éloignés de l'appareil, à moins qu'ils ne soient constamment surveillés.*
- *Les enfants âgés de 3 à 8 ans sont autorisés à allumer et éteindre l'appareil, à condition qu'il soit placé et installé dans sa position de service habituelle et que les enfants soient rigoureusement surveillés et formés sur la façon d'utiliser l'appareil de façon sûre et sur les dangers que cela implique.*
- *Les enfants âgés entre 3 et 8 ans ne sont pas autorisés à introduire la fiche, à régler et nettoyer l'appareil ou à en effectuer la maintenance.*

ATTENTION: Certaines parties de l'appareil peuvent devenir très chaudes et provoquer des brûlures. Il est nécessaire de prêter particulièrement attention en présence d'enfants ou de personnes vulnérables.

→ Traduction des pages de présentation

- Outside thread = Filetage extérieur
- Quantity included = Quantité incluse
- pcs = Pièces
- Accessories = Accessoires
- See separate manual for xxx = Voir le manuel de la référence XXX.
- Wiring diagrams for XXX and XXX, see manual for the controller = Schémas de raccordement pour xxx et xxx, voir le manuel de la référence.
- Note! The air curtain must be secured in the wall or ceiling. = Remarque ! Le rideau d'air doit être bien fixé au mur ou au plafond.

→ Caractéristiques techniques

- Output steps = Etages de puissance
- Output*4 = Puissance
- Airflow*1 = Débit d'air
- Sound power*2 = Puissance acoustique
- FLA (full load amperage)*3 = FLA (intensité totale)
- Motor power = Puissance absorbée
- Voltage motor = Tension moteur
- Amperage motor = Intensité moteur
- Voltage / Amperage heat = Tension / Intensité chauffage
- Water volume = Volume d'eau
- Length = Longueur
- Weight = Poids

1. Débit d'air maxi sur 3 étages de ventilation au total.
2. Les valeurs indiquées concernent les niveaux de puissance acoustique totaux pour une installation de type A: entrée libre, sortie libre. Les niveaux de puissance acoustique indiqués sont en décibels, référés à 10-12 watts, calculés selon la norme AMCA 301.
3. FLA: intensité totale du moteur et de la puissance.
4. Valable pour une temp. d'eau de 60/40 °C / 140/104 °F, temp. d'air d'entrée 18 °C / +64 °F.

Le tableau ci-dessus est valable pour 208V/1ph/60Hz. Egalement approuvé pour 230V/1ph/60Hz. La performance du produit pour 230V/1ph/60Hz est différente des données indiquées.

Indice de protection pour les appareils avec chauffage électrique : IP20.

Indice de protection pour les appareils sans chauffage et appareils avec chauffage à eau : IP21.

Marquage CE.

→ Tableaux de dimensionnement

- Supply water temperature = Température de l'eau d'alimentation
- Room temperature = Température ambiante
- Outlet air temperature*1 = Température de l'air de sortie
- Water temperature = Température de l'eau
- Fan position = Position ventilateur
- Airflow = Débit d'air
- Output*2 = Puissance
- Return water temperature = Température retour d'eau
- Water flow = Débit hydraulique
- Pressure drop = Perte de charge

*1) Température d'air de sortie recommandée pour un confort et un rendement optimaux.

*2) Puissance nominale à une température d'eau spécifique d'alimentation et de retour.

→ Caractéristiques techniques

- Nozzle depth and width = Profondeur et largeur de la buse
- Max velocity at nozzle = Vitesse maximale à la buse
- Outlet velocity = Vitesse de sortie moyenne
- Outlet velocity uniformity = Uniformité de la vitesse de sortie



LIMITED WARRANTY CERTIFICATE

Warranty Schwank Air Curtain Select14 Series Air Curtains

The Manufacturer warrants that this product is free from defects in material or workmanship under normal use and service subject to the terms of this document.

Five Year Limited Warranty

Subject to the conditions and limitations stated herein, during the term of this limited warranty, we will supply any component part (at our option a new or repaired component part) of the air curtain as defined below, which the Manufacturer's examination determines to be defective in workmanship or material for a period of five (5) years from the date of shipment, unless otherwise specified below. This warranty applies to the air curtain's original owner, and subsequent transferees and only if the unit is installed, operated, and maintained in accordance with the printed instructions accompanying the unit and in compliance with all applicable installation codes and good trade practices.

What is not covered

The Manufacturer shall not be responsible for any expenses, including service, labor, diagnosis, analysis, material or transportation charges incurred during removal or reinstallation of this product, or any of its components or parts. All labor or service charges shall be paid by the owner. This warranty does not cover products improperly installed, misused, exposed to or damaged by negligence, accident, corrosive or contaminating atmosphere, water, excessive thermal shock, impact, abrasion, normal wear due to use, alteration or operation contrary to the owner's manual or if the serial number has been altered, defaced or removed. This warranty shall not apply if the electrical input to the product varies by more than $\pm 10\%$ of the rated input on the rating plate. The Manufacturer shall not be liable for any default or delay in performance by its warranty caused by any contingency beyond its control, including war, government restrictions, or restraints, strikes, fire, flood, acts of God, or short or reduced supply of raw materials or products.

Limitations and Exclusions

This document contains all warranties made by the Manufacturer and may not be varied, altered or extended by any person. There are no promises, or agreements extending from the Manufacture other than the statements contained herein. THIS WARRANTY IS IN LIEU OF ALL WARRANTIES EXPRESSED OR IMPLIED, TO THE EXTENT AUTHORIZED BY THE LAWS OF THE JURISDICTION, INCLUDING SPECIFICALLY THE WARRANTIES OR MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE.

It is understood and agreed that the Manufacturer's obligation hereunder is limited to repairing or replacing parts determined to be defective as stated above. In no event shall the Manufacturer be responsible for any alleged personal injuries or other special, incidental or consequential damages. As to property damages, contract, tort or other claim the Manufacturer's responsibility shall not exceed the purchase price paid for the product. All replacement parts will be warranted for the unused portion of the warranty coverage period remaining on the applicable unit.

Some Authorities do not allow certain warranty exclusions or limitations on duration of warranty or the exclusions or limitations of incidental or consequential damages. In such cases, the above limitations or exclusions may not apply to you and are not intended to do so where prohibited by law. This warranty gives you specific legal rights. You may also have other rights which vary by jurisdiction.

SCHWANK USA, INC.
SCHWANK LTD.

2 SCHWANK WAY, WAYNESBORO, GEORGIA. 30830
5285 BRADCO BLVD. MISSISSAUGA, ON, L4W 2A6

TEL: 1-877-446-3727
csr@SchwankGroup.com

Fax: 1-866-361-0523
www.schwankgroup.com

SchwankAir
WARRANTY
DECEMBER 2021
RL: 1A



Schwank Air Curtains

1-877-686-3779 (toll-free)
1-706-554-6191

csr@schwankgroup.com
schwankgroup.com/schwankair

USA

2 Schwank Way,
Waynesboro, GA
30830

Canada

5285 Bradco Blvd.,
Mississauga, ON
L4W 2A6